



# Smoke control damper

## EK-JS

according to EN 12101-8, tested according to EN 1366-10

Declaration of Performance DoP / EK-JS / 002



**TROX<sup>®</sup> TECHNİK**

The art of handling air

**TROX GmbH**

Heinrich-Trox-Platz

47504 Neukirchen-Vluyn

Germany

Phone: +49 (0) 2845 202-0

Fax: +49 (0) 2845 202-265

E-mail: [trox-de@troxgroup.com](mailto:trox-de@troxgroup.com)

Internet: <http://www.troxtechnik.com>

Translation of the original

A00000090732, 3, GB/en

03/2024

Valid from 01/2022

## General information

### About this manual

This operating and installation manual enables operating or service personnel to correctly install the TROX product described below and to use it safely and efficiently.

This operating and installation manual is intended for use by fitting and installation companies, in-house technicians, technical staff, instructed persons, and qualified electricians or air conditioning technicians.

It is essential that these individuals read and fully understand this manual before starting any work. The basic prerequisite for safe working is to comply with the safety notes and all instructions in this manual.

The local regulations for health and safety at work and general safety regulations also apply.

This manual must be given to the system owner when handing over the system. The system owner must include the manual with the system documentation. The manual must be kept in a place that is accessible at all times.

Illustrations in this manual are mainly for information and may differ from the actual design.

### Copyright

This document, including all illustrations, is protected by copyright and pertains only to the corresponding product.

Any use without our consent may be an infringement of copyright, and the violator will be held liable for any damage.

This applies in particular to:

- Publishing content
- Copying content
- Translating content
- Microcopying content
- Saving content to electronic systems and editing it

### TROX Technical Support

To ensure that your request is processed as quickly as possible, please keep the following information ready:

- Product name
- TROX order number
- Delivery date
- Brief description of defect or issue

Online	<a href="http://www.trox.de">www.trox.de</a>
Phone	+49 2845 202-0

### Limitation of liability

The information in this manual has been compiled with reference to the applicable standards and guidelines, the state of the art, and our expertise and experience of many years.

The manufacturer does not accept any liability for damages resulting from:

- Non-compliance with this manual
- Incorrect use
- Operation or handling by untrained individuals
- Unauthorised modifications
- Technical changes
- Use of non-approved replacement parts

The actual scope of delivery may differ from the information in this manual for bespoke constructions, additional order options or as a result of recent technical changes.

The obligations agreed in the order, the general terms and conditions, the manufacturer's terms of delivery, and the legal regulations in effect at the time the contract is signed shall apply.

We reserve the right to make technical changes.

### Warranty claims

The provisions of the respective general delivery terms apply to warranty claims. For purchase orders placed with TROX GmbH, these are the regulations in section "VI. Warranty claims" of the Delivery Terms of TROX GmbH, see [www.trox.de/en/](http://www.trox.de/en/).

## Safety notes

Symbols are used in this manual to alert readers to areas of potential hazard. Signal words express the degree of the hazard.

Comply with all safety instructions and proceed carefully to avoid accidents, injuries and damage to property.

### **DANGER!**

Imminently hazardous situation which, if not avoided, will result in death or serious injury.

### **WARNING!**

Potentially hazardous situation which, if not avoided, may result in death or serious injury.

### **CAUTION!**

Potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

### **NOTICE!**

Potentially hazardous situation which, if not avoided, may result in property damage.

### **ENVIRONMENT!**

Environmental pollution hazard.

## Tips and recommendations



*Useful tips and recommendations as well as information for efficient and fault-free operation.*

## Safety notes as part of instructions

Safety notes may refer to individual instructions. In this case, safety notes will be included in the instructions and hence facilitate following the instructions. The above listed signal words will be used.

Example:

1. ▶ Loosen the screw.

2. ▶

### **CAUTION!**


**Danger of finger entrapment when closing the lid.**

Be careful when closing the lid.

3. ▶ Tighten the screw.

## Specific safety notes

The following symbols are used in safety notes to alert you to specific hazards:

Warning signs	Type of danger
	Warning – danger zone.

<b>1</b>	<b>Safety</b> .....	<b>6</b>	<b>8</b>	<b>Commissioning/functional test</b> .....	<b>55</b>
	1.1 General safety notes .....	6		8.1 Commissioning .....	55
	1.2 Correct use .....	6		8.2 Functional test .....	55
	1.3 Qualified staff .....	7	<b>9</b>	<b>Maintenance</b> .....	<b>56</b>
<b>2</b>	<b>Technical data</b> .....	<b>8</b>	<b>10</b>	<b>Decommissioning, removal and disposal</b> ...	<b>58</b>
	2.1 General data .....	8		10.1 Final decommissioning .....	58
	2.2 Dimensions and weights .....	13		10.2 Removal .....	58
<b>3</b>	<b>Transport and storage</b> .....	<b>15</b>		10.3 Disposal .....	58
<b>4</b>	<b>Parts and function</b> .....	<b>16</b>	<b>11</b>	<b>Flange dimensional drawing</b> .....	<b>60</b>
	4.1 Overview .....	16	<b>12</b>	<b>Index</b> .....	<b>62</b>
	4.2 Functional description .....	16			
<b>5</b>	<b>Installation</b> .....	<b>18</b>			
	5.1 Installation situations .....	18			
	5.2 Safety notes regarding installation .....	18			
	5.3 General installation information .....	18			
	5.3.1 High-temperature sealing tape .....	19			
	5.4 Sheet steel smoke extract duct .....	20			
	5.4.1 On a horizontal duct .....	20			
	5.4.2 In a horizontal duct .....	22			
	5.4.3 At the end of a horizontal duct .....	24			
	5.4.4 On horizontal duct .....	26			
	5.4.5 Under a horizontal duct .....	30			
	5.4.6 On a vertical duct .....	34			
	5.4.7 In a vertical duct .....	36			
	5.4.8 At the end of a vertical duct .....	38			
	5.5 Solid smoke extract duct .....	40			
	5.5.1 On a vertical solid duct .....	40			
	5.6 Suspending the smoke control damper ...	42			
	5.6.1 General information .....	42			
	5.6.2 Fixing to the ceiling .....	42			
	5.6.3 Suspending the smoke control damper .....	42			
<b>6</b>	<b>Smoke extract duct and cover grille</b> .....	<b>43</b>			
	6.1 Smoke extract ducts .....	43			
	6.2 Cover grilles .....	44			
<b>7</b>	<b>Electrical connection</b> .....	<b>45</b>			
	7.1 General safety instructions .....	45			
	7.2 General instructions for wiring and con- nection to the MCE .....	45			
	7.3 Actuators .....	46			
	7.3.1 B24 .....	47			
	7.3.2 B230 .....	48			
	7.3.3 B24-SR .....	49			
	7.4 Actuator with control module .....	50			
	7.4.1 TROXNETCOM B24A, B24AM, B24AS .....	51			
	7.4.2 B24BKNE .....	52			
	7.4.3 B24D and B230D .....	53			

## 1 Safety

### 1.1 General safety notes

#### Sharp edges, sharp corners and thin sheet metal parts

 **CAUTION!**

**Danger of injury from sharp edges, sharp corners and thin sheet metal parts!**

Sharp edges, sharp corners and thin sheet metal parts may cause cuts or grazes.

- Be careful when carrying out any work.
- Wear protective gloves, safety shoes and a hard hat.

#### Electrical voltage

 **DANGER!**

Danger of electric shock! Do not touch any live components! Electrical equipment carries a dangerous electrical voltage.

- Only skilled qualified electricians are allowed to work on the electrical system.
- Switch off the power supply before working on any electrical equipment.

### 1.2 Correct use

Smoke control dampers type EK-JS are used to remove smoke or heat, and to supply air within smoke and heat venting systems, in the event of an incident.

Daily use for air exchange is possible within the described operating conditions (ambient temperature, humidity).

- Smoke control dampers type EK-JS may be used in the following systems:
  - in pressure differential systems (PDS)
  - in mechanical smoke extract systems
  - in heat venting systems
- For use in single sections for increased operating temperatures up to 600 °C.
- Permitted for automatic release (AA) and manual release (MA).
- Suitable for use in combined systems (combination damper) for ventilation.
- Suitable for restricting extract air volume flows.

- Operation of smoke control dampers is allowed only in compliance with the Declaration of Performance (DoP) and these installation and operating instructions.
  - On sheet steel ducts tested in accordance with EN1366-9 or EN1366-1, or sheet steel ducts described and specified in accordance with the on-site fire protection concept, with the aim of complying with the equivalence of the planning, dimensioning and execution regulations of the national technical building regulations.
- Modifying the smoke control damper or using replacement parts that have not been approved by TROX is not permitted.

#### Incorrect use

 **WARNING!**

**Danger due to incorrect use!**

Incorrect use of the smoke control damper can lead to dangerous situations.

Never use the smoke control damper:

- in areas with potentially explosive atmospheres
- outdoors without sufficient protection against the effects of weather and outside of temperature limits
- in atmospheres where chemical reactions, whether planned or unplanned, may cause damage to the smoke control damper or lead to corrosion

### 1.3 Qualified staff

**WARNING!****Danger of injury due to insufficiently qualified individuals!**

Incorrect use may cause considerable injury or damage to property.

- Only specialist personnel must carry out work.

The following degrees of qualification are required for the work described in the operating manual:

**Skilled qualified electrician**

Skilled qualified electricians are individuals who have sufficient professional or technical training, knowledge and actual experience to enable them to work on electrical systems, understand any potential hazards related to the work under consideration, and recognise and avoid any risks involved.

**Trained personnel**

Trained personnel are individuals who have sufficient professional or technical training, knowledge and actual experience to enable them to carry out their assigned duties, understand any potential hazards related to the work under consideration, and recognise and avoid any risks involved.

## 2 Technical data

### 2.1 General data

<b>Nominal sizes B × H</b>	100 × 100 to 1250 × 2560 mm
<b>Casing length</b>	200 mm
<b>Volume flow rate range with maximum upstream velocity of 10 m/s</b>	from 360 m³/h to 115,200 m³/h from 100 l/s to 32,000 l/s
<b>Differential pressure range</b>	Pressure level 3, -1500...500 Pa
<b>Operating temperature</b>	-30 °C...50 °C without falling below the dew point
<b>Upstream velocity</b> with uniform upstream and downstream flow	<ul style="list-style-type: none"> <li>■ ≤ 12 m/s, dimensional range ↪ <i>table on page 11</i></li> <li>■ ≤ 20 m/s, dimensional range ↪ <i>table on page 12</i></li> </ul> <p><b>Note:</b> Technical clarification with TROX required for some sizes.</p>
<b>Leakage air flow for closed damper</b>	EN 1751, Class 2 Nominal size B × H ≥ 840 x 480: Class 3
<b>Casing air leakage</b>	EN 1751, Class B Nominal size B × H ≥ 840 x 480: Class C
<b>EC conformity</b>	<ul style="list-style-type: none"> <li>■ EU Construction Products Regulation No. 305/2011</li> <li>■ DIN EN 12101-8 – Smoke and heat control systems – Part 8: Smoke control dampers</li> <li>■ DIN EN 1366-10 – Fire resistance tests for service installations – Part 10: Smoke control dampers</li> <li>■ DIN EN 13501-4 – Classification - Part 4: Fire resistance tests on components of smoke control systems</li> <li>■ DIN EN 1751 – Ventilation of buildings - Air terminal devices</li> </ul>
<b>Declaration of Performance</b>	DoP / EK-JS / 002



Rating plates



Fig. 1: Damper with encasing (detail)

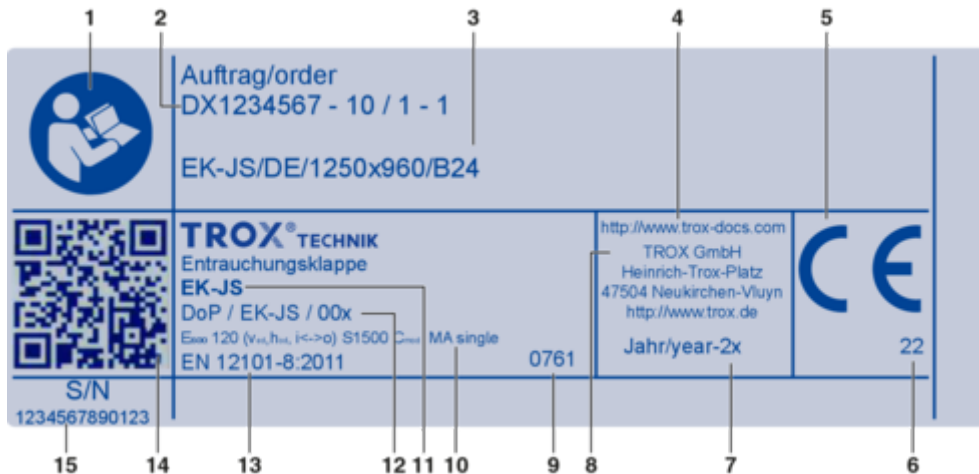


Fig. 2: Rating plate of the smoke control damper with encasing

- |   |   |    |  |
|---|---|----|--|
| 1 | Note on observing the operating manual                              | 9  | Notified body  |
| 2 | Order number  | 10 | Details of all regulated characteristics. The fire resistance class depends on the application and may vary ↪ 5.1 'Installation situations' on page 18 |
| 3 | Order code  | 11 | Type   |
| 4 | Internet address for downloading the documents for verification     | 12 | No. of the Declaration of Performance  |
| 5 | CE marking  | 13 | Number of the European standard and year of its publication  |
| 6 | The last two digits of the year in which the CE marking was affixed | 14 | QR code to access the documentation  |
| 7 | Year of manufacture   | 15 | Product identification number  |
| 8 | Manufacturer's address  |    |  |



Fig. 3: Damper without encasing (detail)

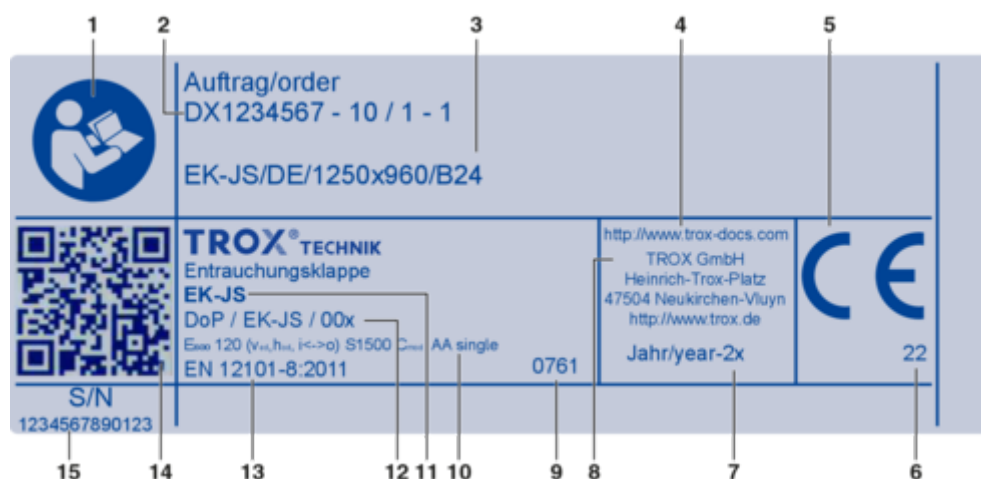


Fig. 4: Rating plate of the smoke control damper without encasing

- |   |   |    |  |
|---|---|----|--|
| 1 | Note on observing the operating manual                              | 9  | Notified body  |
| 2 | Order number  | 10 | Details of all regulated characteristics. The fire resistance class depends on the application and may vary ↗ 5.1 'Installation situations' on page 18 |
| 3 | Order code  | 11 | Type   |
| 4 | Internet address for downloading the documents for verification     | 12 | No. of the Declaration of Performance  |
| 5 | CE marking  | 13 | Number of the European standard and year of its publication  |
| 6 | The last two digits of the year in which the CE marking was affixed | 14 | QR code to access the documentation  |
| 7 | Year of manufacture   | 15 | Product identification number  |
| 8 | Manufacturer's address  |    |  |

Actuator depending on the size of the smoke control damper, at 12 m/s

H	B																							
	100	150	200	250	300	360	400	450	520	550	600	680	700	750	840	850	900	950	1000	1050	1100	1150	1200	1250
100	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
125	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
150	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
165	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
320			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
480			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
640			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
800			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
960			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	●	●	●	●	●
1120			x	x	x	x	x	x	x	x	x	x	x	x	●	●	●	●	●	●	●	●	●	●
1280			x	x	x	x	x	x	x	x	●	●	●	●	●	●	●	●	●	●	●	●	●	●
1440			x	x	x	x	x	x	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
1600			x	x	x	x	x	●	●	●	●	●	●	●	●	●	●	●	●	●	●	□	□	□
1760			x	x	x	●	●	●	●	●	●	●	●	●	●	●	●	●	●	□	□	□	□	□
1920			x	●	●	●	●	●	●	●	●	●	●	□	□	□	□	□	□	□	□	□	□	□
2080			●	●	●	●	●	●	●	●	●	●	□	□	□	□	□	□	□	□	□	□	□	□
2240			●	●	●	●	●	●	●	●	□	□	□	□	□	□	□	□	□	□	□	□	□	□
2400			●	●	●	●	●	●	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□
2560			●	●	●	●	●	●	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□	★

x = 15 Nm BEN, ● = 25 Nm BEE, □ = 40 Nm BE, ★ = technical clarification with TROX required

## General data

### Actuator depending on the size of the smoke control damper, at 20 m/s

H	B																								
	100	150	200	250	300	360	400	450	520	550	600	680	700	750	840	850	900	950	1000	1050	1100	1150	1200	1250	
100	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
125	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
150	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
165	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
320			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
480			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
640			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	●	●	●	●
800			x	x	x	x	x	x	x	x	x	x	x	x	●	●	●	●	●	●	●	●	●	●	●
960			x	x	x	x	x	x	x	x	x	●	●	●	●	●	●	●	●	●	●	●	●	●	●
1120			x	x	x	x	x	x	●	●	●	●	●	●	●	●	●	●	●	●	●	□	□	□	□
1280			x	x	x	x	x	●	●	●	●	●	●	●	●	●	●	□	□	□	□	□	□	□	□
1440			x	x	x	●	●	●	●	●	●	●	●	●	□	□	□	□	□	□	□	□	□	□	□
1600			x	x	●	●	●	●	●	●	●	□	□	□	□	□	□	□	□	□	□	□	□	□	□
1760			●	●	●	●	●	●	●	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□
1920			●	●	●	●	●	□	□	□	□	□	□	□	□	□	□	□	□	□	□	★	★	★	★
2080			●	●	●	●	□	□	□	□	□	□	□	□	□	□	□	□	□	★	★	★	★	★	★
2240			●	●	●	□	□	□	□	□	□	□	□	□	□	□	★	★	★	★	★	★	★	★	★
2400			●	●	□	□	□	□	□	□	□	□	□	□	★	★	★	★	★	★	★	★	★	★	★
2560			●	□	□	□	□	□	□	□	□	□	□	★	★	★	★	★	★	★	★	★	★	★	★

x = 15 Nm BEN, ● = 25 Nm BEE, □ = 40 Nm BE, ★ = technical clarification with TROX required

2.2 Dimensions and weights

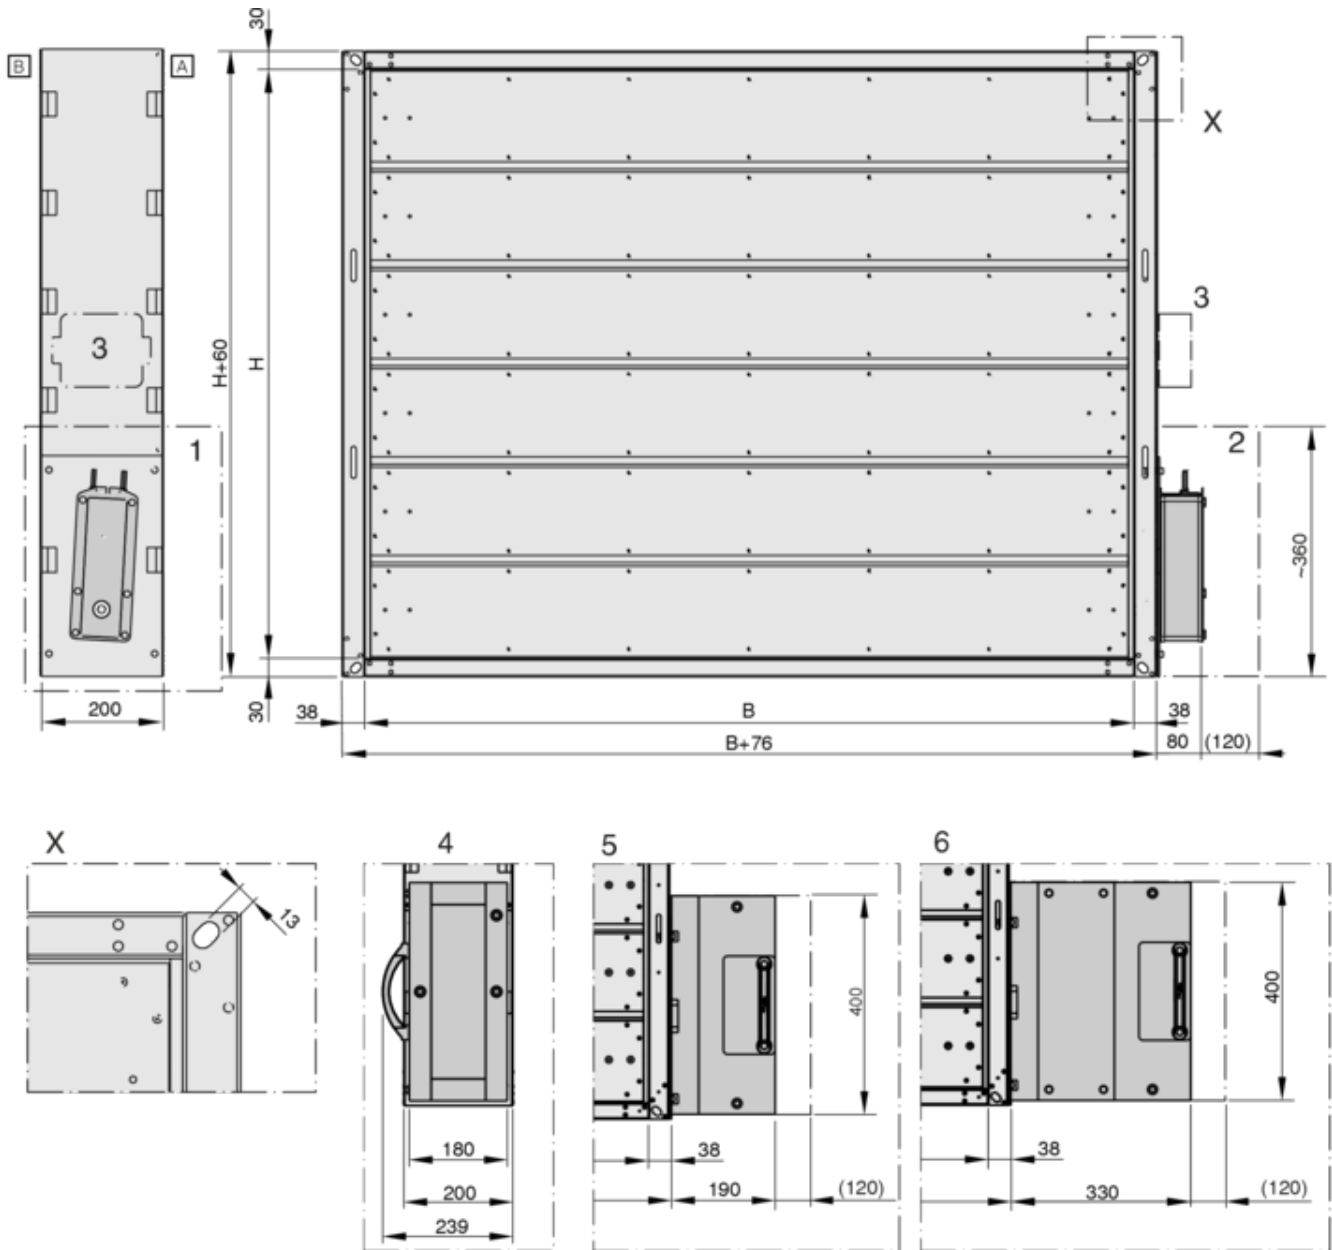


Fig. 5: EK-JS dimensional drawing

- |  |  |
|--|--|
| <p><b>A</b> Installation side</p> <p><b>B</b> Operating side</p> <p><b>B</b> Width</p> <p><b>H</b> Height</p> <p><b>B x H</b> = nominal size = area exposed to the airflow</p> <p>~120 mm required space (inspection room)</p> | <p><b>1</b> Side view of damper without encasing</p> <p><b>2</b> Front view of damper without encasing</p> <p><b>3</b> Fixing option for control module, Fixing with self-drilling screws <math>\varnothing 4.2 \times 9.5</math> mm (provided by others)</p> <p><b>4</b> Side view of damper with encasing and damper with encasing extension</p> <p><b>5</b> Front view of damper with encasing</p> <p><b>6</b> Front view of damper with encasing extension</p> |
|--|--|

## Dimensions and weights

### Dimensions [mm] and total weight including actuator [kg]

H	B																							
	100	150	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1050	1100	1150	1200	1250
100	7	8	8	8	9	9	9	10	10	10	11	11	11	11	12	12	12	13	13	13	14	14	14	15
125	8	8	8	9	9	9	10	10	10	11	11	11	11	12	12	12	13	13	13	14	14	14	15	15
150	8	8	9	9	9	9	10	10	10	11	11	11	12	12	12	13	13	13	14	14	14	15	15	15
165	8	8	9	9	9	10	10	10	11	11	11	12	12	12	13	13	13	14	14	14	15	15	15	16
320			11	12	13	13	14	15	15	16	17	17	18	19	19	20	21	21	22	23	23	24	25	25
480			13	14	15	16	16	17	18	19	19	20	21	22	22	23	24	25	26	26	27	28	29	29
640			16	16	17	18	19	20	21	21	22	23	24	25	26	27	27	28	29	30	31	32	32	33
800			18	19	20	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	35	36	37
960			20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	42
1120			22	23	24	25	27	28	29	30	31	32	33	34	36	37	38	39	40	42	43	44	45	46
1280			24	25	27	28	29	30	32	33	34	35	37	38	39	41	42	43	44	46	47	48	49	51
1440			26	28	29	30	32	33	34	36	37	39	40	41	43	44	45	47	48	50	51	52	54	55
1600			28	30	31	33	34	36	37	39	40	42	43	45	46	48	49	51	52	54	55	57	58	59
1760			31	32	34	35	37	39	40	42	43	45	47	48	50	51	53	54	56	58	59	62	64	66
1920			33	35	36	38	40	41	43	45	47	48	50	52	53	55	57	58	62	63	65	67	68	70
2080			35	37	39	41	42	44	46	48	50	51	53	55	57	58	62	64	65	67	69	71	73	74
2240			37	39	41	43	45	47	49	51	53	54	56	60	62	64	66	67	69	71	73	75	77	79
2400			40	42	44	46	48	50	52	54	56	59	61	63	65	67	69	71	73	75	77	79	81	83
2560			42	44	46	48	50	52	54	57	60	62	65	67	69	71	73	75	77	79	81	84	86	88

Weights refer to the damper without encasing

Weight with encasing + 5 kg

Weight with encasing and encasing extension + 8.5 kg

### 3 Transport and storage

#### Delivery check

Check delivered items immediately after arrival for transport damage and completeness. In case of any damage or an incomplete shipment, contact the shipping company and your supplier immediately.

A complete shipment includes:

- Smoke control damper(s)
  - Attachments/accessories, if any
- Installation and operating manual (one per shipment)



#### **Fixing and installation material**

*Fixing and installation material is not part of the supply package (unless stated otherwise), but has to be provided by others; it has to be suitable for the installation situation.*

#### Transport on site

Take the product in its transport packaging up to the installation location.

#### Storage

For temporary storage please note:

- Remove any plastic wrapping.
- Protect the product from dust and contamination.
- Store the product in a dry place and away from direct sunlight.
- Do not expose the unit to the effects of weather (not even in its packaging).
- Storage temperature: -30 °C to 50 °C, no condensation.

#### Packaging

Properly dispose of packaging material.

## 4 Parts and function

### 4.1 Overview

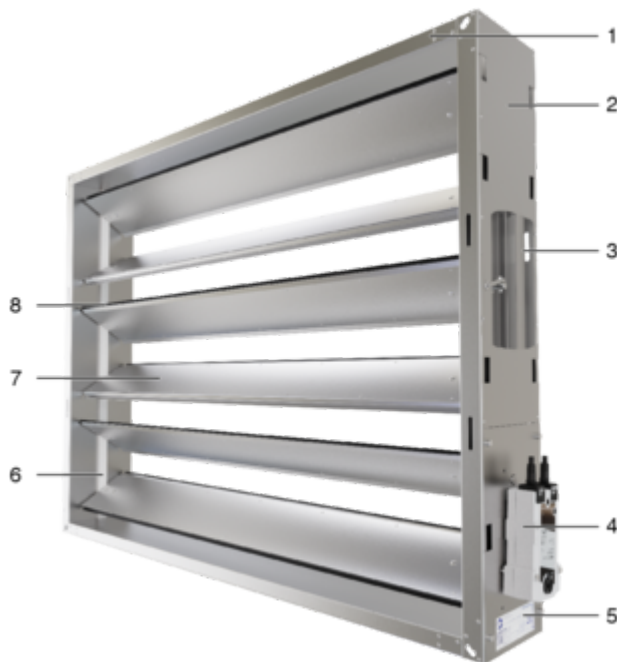


Fig. 6: Smoke control damper EK-JS

- 1 Enclosure
- 2 Linkage cover (cut open)
- 3 Linkage
- 4 Actuator
- 5 Rating plate
- 6 Side seal
- 7 Damper blades
- 8 Damper blade profiled seal

### 4.2 Functional description

Smoke control dampers of type EK-JS are used in smoke control systems and serve, on the one hand, to remove smoke gases and heat energy and, on the other hand, to allow fresh air to flow into the area to be kept smoke-free.

The EK-JS is used in pressurised ventilation systems to keep smoke away from

- safety staircases and their vestibules
- fire brigade lift shafts
- escape tunnels

The EK-JS is intended for use in single sections. It may be used in combined ventilation/smoke extract systems as a combination damper for smoke extraction as well as for restricting extract air volume flows.

Regular maintenance of the smoke control damper is required to ensure its functional reliability ↪ 9 'Maintenance' on page 56 .

### Smoke extract operation

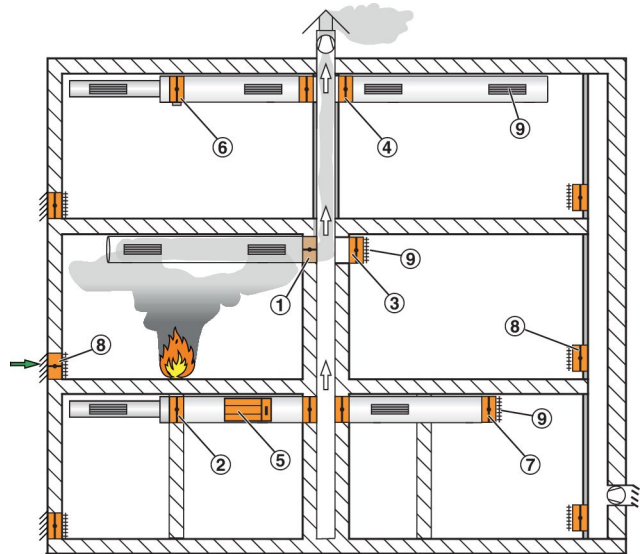


Fig. 7: Smoke extract system

- ① EK-JZ or EK2-EU in solid shaft wall
- ② EK-JZ or EK2-EU in solid wall or duct
- ③ EK-JZ or EK2-EU on solid shaft wall
- ④ EK-JZ or EK2-EU on a vertical smoke extract duct (shaft)
- ⑤ EK-JZ or EK2-EU on a horizontal smoke extract duct
- ⑥ **EK-JS** in horizontal smoke extract duct
- ⑦ **EK-JS** at the end of a horizontal smoke extract duct
- ⑧ **EK-JS**, **EK-JZ** or **EK2-EU** as additional supply air inlet
- ⑨ Cover grille

Smoke control dampers are completely closed during normal operation. For smoke extract, the smoke control dampers in the affected fire compartment are opened so that smoke can be extracted. All other smoke control dampers remain completely closed.

If the smoke control dampers are used as additional air supply inlets, the dampers open during smoke extraction operation in the affected fire compartment. To create a low-smoke layer, smoke control dampers used as additional supply air inlets should be installed near the floor.

The actuator can be controlled automatically (AA) by a duct smoke detector or a fire alarm system. It is also possible to carry out the signalling manually (MA), either up to a specific time (25th minute) or by manual override (MA).

A supply voltage with functional integrity is required to ensure that the actuator is supplied with power even in the event of a fire, so that the function and communication are maintained. This ensures that the actuator can function properly even in the event of a fire.



**Supply air and smoke extraction in ventilation systems**

When authorised by building authorities or authorised bodies, smoke extract and supply air applications as well as ventilation can be enabled in combined systems with smoke control dampers. Depending on the system layout, the damper blade can be fully opened, fully closed or in the intermediate position. Depending on where the dampers are installed, country-specific regulations may apply to ventilation applications.

## 5 Installation

### 5.1 Installation situations

The table lists the various installation types of EK-JS smoke control dampers. For details on the performance level see the Declaration of Performance.

Installation locations described here may occur with other installation location characteristics. For example, a smoke control damper may be installed on a vertical smoke extract duct where a horizontal smoke extract duct branches off.

Supporting construction	Construction	Installation location	Installation type	Performance level	Installation information
<b>horizontal sheet steel smoke extract duct</b>	<ul style="list-style-type: none"> <li>Sheet steel smoke extract duct tested according to EN 1366-9</li> <li>Operating temperature up to 600 °C</li> </ul>	on a horizontal duct	LE	E <sub>600</sub> 120 (v <sub>ed</sub> , i↔o) S	☼ 20
		in a horizontal duct			☼ 22
		at the end of a horizontal duct			☼ 24
		on top of a horizontal duct		E <sub>600</sub> 120 (h <sub>od</sub> , i↔o) S	☼ 26
		under a horizontal duct		☼ 30	
<b>vertical sheet steel smoke extract duct (horizontal sheet steel smoke extract duct with height offset)</b>		on a vertical duct		E <sub>600</sub> 120 (v <sub>ed</sub> , i↔o) S	☼ 34
		in a vertical duct		E <sub>600</sub> 120 (h <sub>od</sub> , i↔o) S	☼ 36
		at the end of a vertical duct		E <sub>600</sub> 120 (h <sub>od</sub> , i↔o) S	☼ 38
<b>vertical solid smoke extract ducts</b>	<ul style="list-style-type: none"> <li>Operating temperature up to 600 °C</li> </ul>	on a vertical duct		E <sub>600</sub> 120 (v <sub>ed</sub> , i↔o) S	☼ 40

LE = Installation as specified for the duct

### 5.2 Safety notes regarding installation

Sharp edges, sharp corners and thin sheet metal parts

**CAUTION!**

**Danger of injury from sharp edges, sharp corners and thin sheet metal parts!**

Sharp edges, sharp corners and thin sheet metal parts may cause cuts or grazes.

- Be careful when carrying out any work.
- Wear protective gloves, safety shoes and a hard hat.

### 5.3 General installation information


**NOTICE!**

**Damage of smoke control damper**

- During installation, protect the smoke control damper from contamination and damage.
- Cover the flange openings and the actuator (e.g. with plastic foil) to protect them from mortar and dripping water.

Please note:

- The smoke control damper must always be installed vertically and horizontally without torsion.
- No loads must act on the housing, as this can lead to malfunctions of the smoke control damper.
- Smoke control damper and electric actuator must remain accessible for maintenance.

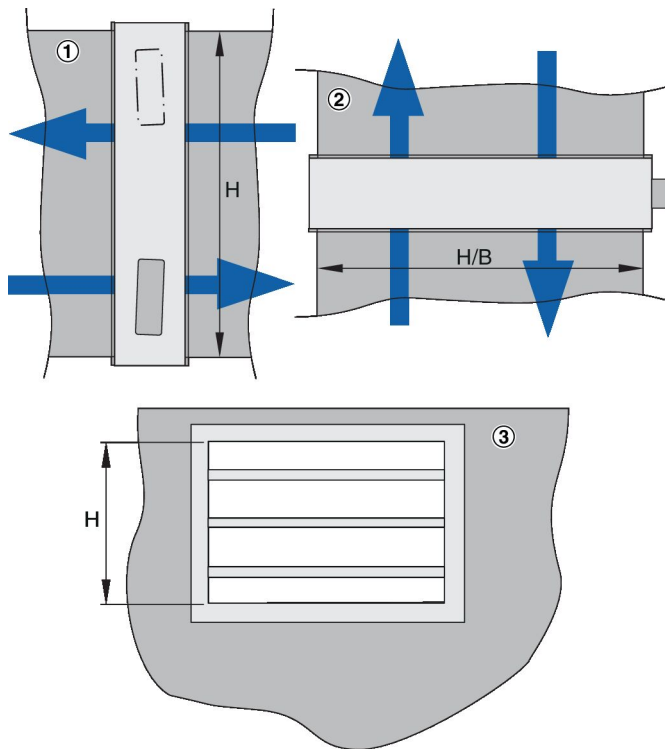**Installation position**

- 1 Horizontal smoke extract duct
- 2 Vertical smoke extract duct (horizontal)
- 3 Solid smoke extract duct

The smoke control damper has to be installed so that the damper blade shaft is horizontal, or in a flat (lying) position.

The position of the actuator is not critical but it must remain accessible for maintenance.

**5.3.1 High-temperature sealing tape**

High-temperature sealing tape is used to seal between the flange of the smoke control damper and the flange of the sheet steel smoke extract duct and is available as an accessory (accessories 17 and 19)

Fig. 8: EK-JS installation position

## 5.4 Sheet steel smoke extract duct

### 5.4.1 On a horizontal duct

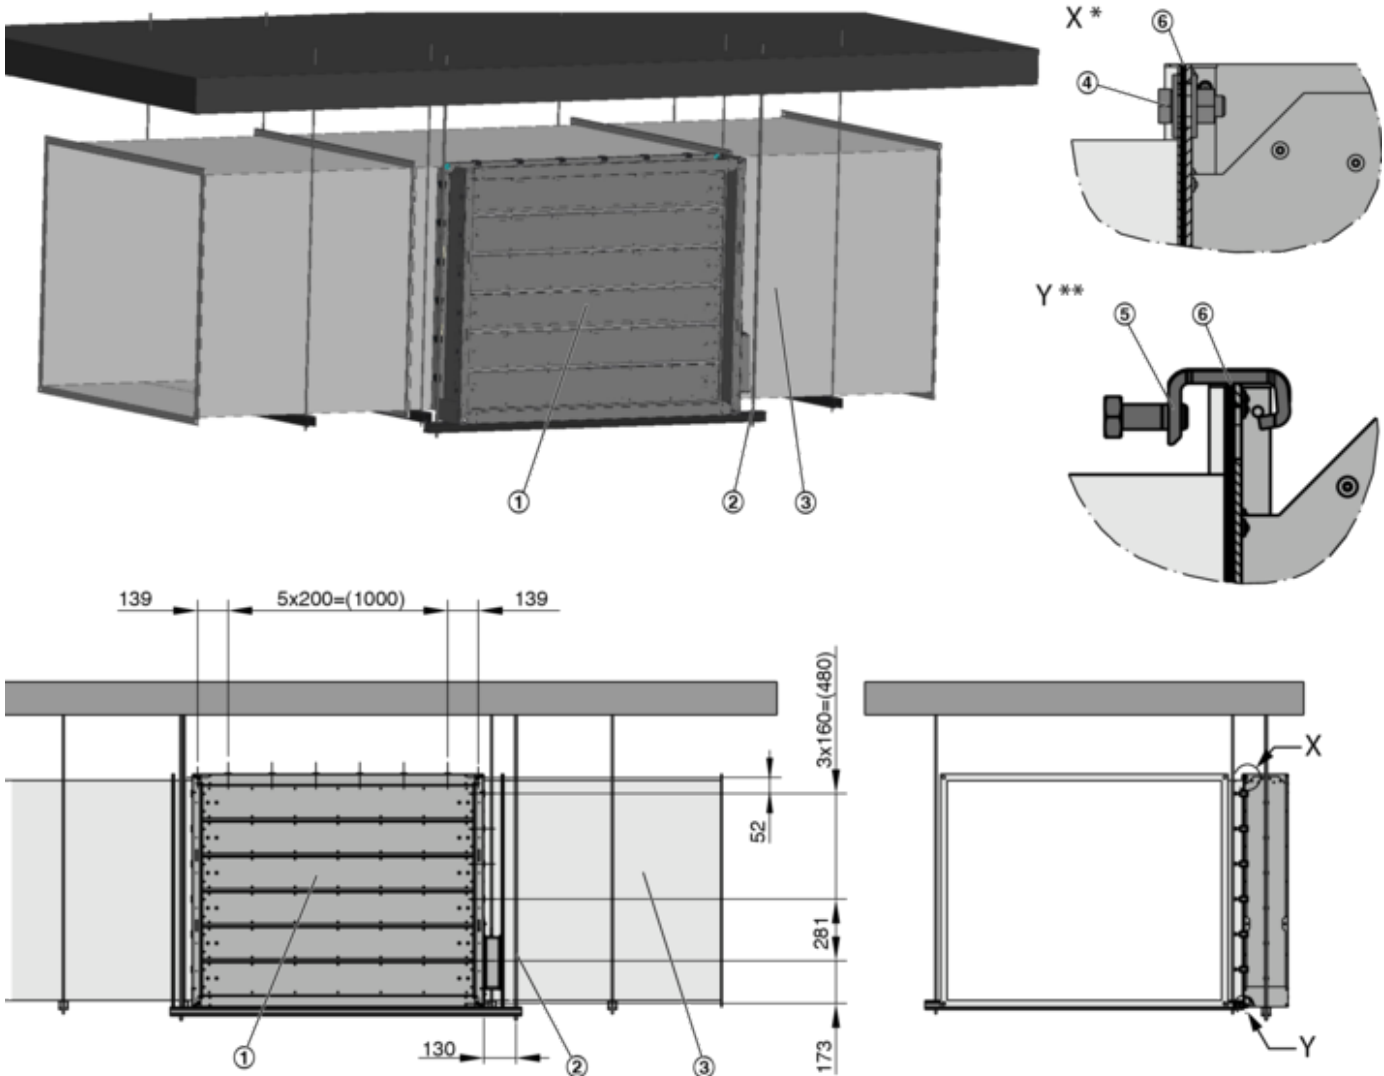


Fig. 9: Installation on a horizontal smoke extract duct

- ① EK-JS
  - ② Suspension ↗ 5.6 'Suspending the smoke control damper' on page 42
  - ③ Sheet steel duct for increased operating temperatures
  - ④ Hexagon bolts M8 with 2 washers and nuts (provided by others)
  - ⑤ Duct clamps or self-drilling screws  $\varnothing 5.5 \times 22$  mm (provided by others)
  - ⑥ HT sealing tape (as accessories or provided by others)
- \* Duct clamps not shown  
 \*\* Hexagon bolts M8 with 2 washers and nut, not shown

#### Classification:

E<sub>600</sub>120 (V<sub>ed</sub>- i <-> o) S1500 C<sub>mod</sub> AA single

**Personnel:**

- Trained personnel

**Requirements:**

- Sheet steel duct for increased operating temperatures
  - The actuator must remain accessible for maintenance work after installation
1. ▶ Build and suspend the sheet steel duct ③ according to manufacturer's instructions.
  2. ▶ For sealing, apply HT sealing tape ⑥ to the flange of the smoke control damper ①.
  3. ▶ Create suspension ② for the smoke control damper ↪ *Chapter 5.6 'Suspending the smoke control damper' on page 42* .
  4. ▶ Screw smoke control damper to the sheet steel duct with hexagon bolts, washers and nuts ④.
  5. ▶ In addition, connect the smoke control damper with duct clamps ⑤ or alternatively with self-drilling screws ↪ *Chapter 6.1 'Smoke extract ducts' on page 43* .

## 5.4.2 In a horizontal duct

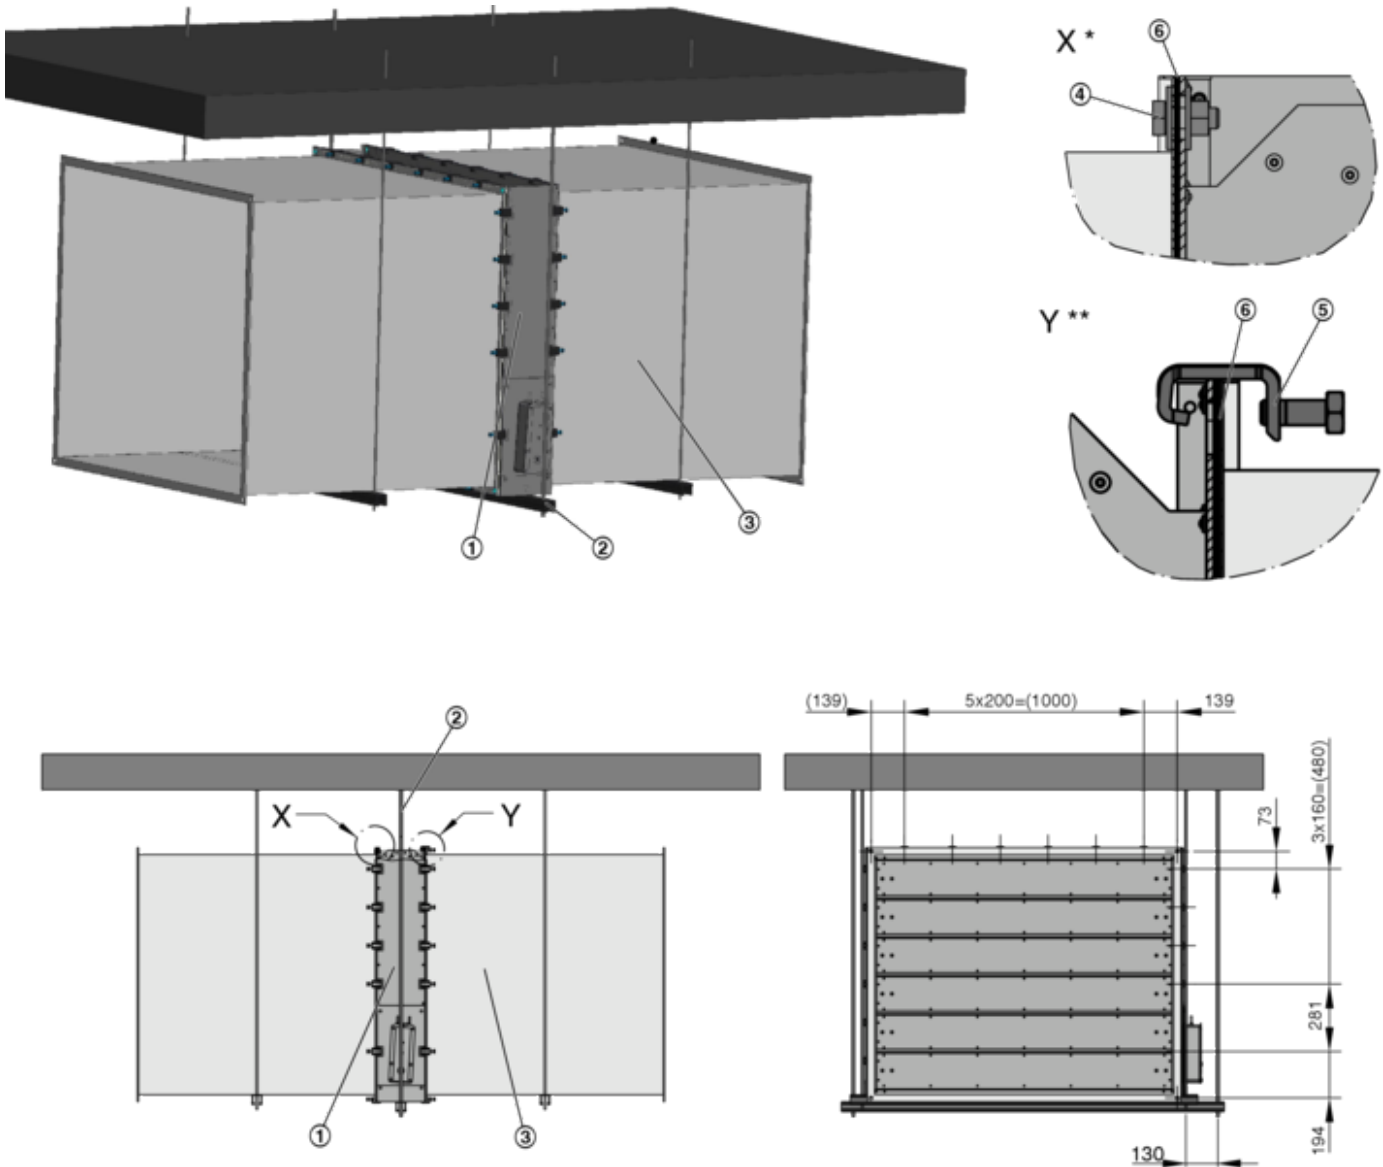


Fig. 10: Installation in a horizontal smoke extract duct

- ① EK-JS
- ② Suspension  $\hookrightarrow$  5.6 'Suspending the smoke control damper' on page 42
- ③ Sheet steel duct for increased operating temperatures
- ④ Hexagon bolts M8 with 2 washers and nuts (provided by others)
- ⑤ Duct clamps or self-drilling screws  $\varnothing$  5.5 x 22 mm (provided by others)
- ⑥ HT sealing tape (as accessories or provided by others)
- \* Duct clamps not shown
- \*\* Hexagon bolts M8 with 2 washers and nut, not shown

**Classification:**

E<sub>600</sub>120 (v<sub>ed</sub>- i <-> o) S1500 C<sub>mod</sub> AA single

**Personnel:**

- Trained personnel

**Requirements:**

- Sheet steel duct for increased operating temperatures
  - The actuator must remain accessible for maintenance work after installation
1. ▶ Build and suspend the sheet steel duct ③ according to manufacturer's instructions.
  2. ▶ For sealing, apply HT sealing tape ⑥ to the flange of the smoke control damper ①.
  3. ▶ Create suspension ② for the smoke control damper ↪ *Chapter 5.6 'Suspending the smoke control damper' on page 42* .
  4. ▶ Screw smoke control damper to the sheet steel duct with hexagon bolts, washers and nuts ④.
  5. ▶ In addition, connect the smoke control damper with duct clamps ⑤ or alternatively with self-drilling screws ↪ *Chapter 6.1 'Smoke extract ducts' on page 43* .

## 5.4.3 At the end of a horizontal duct

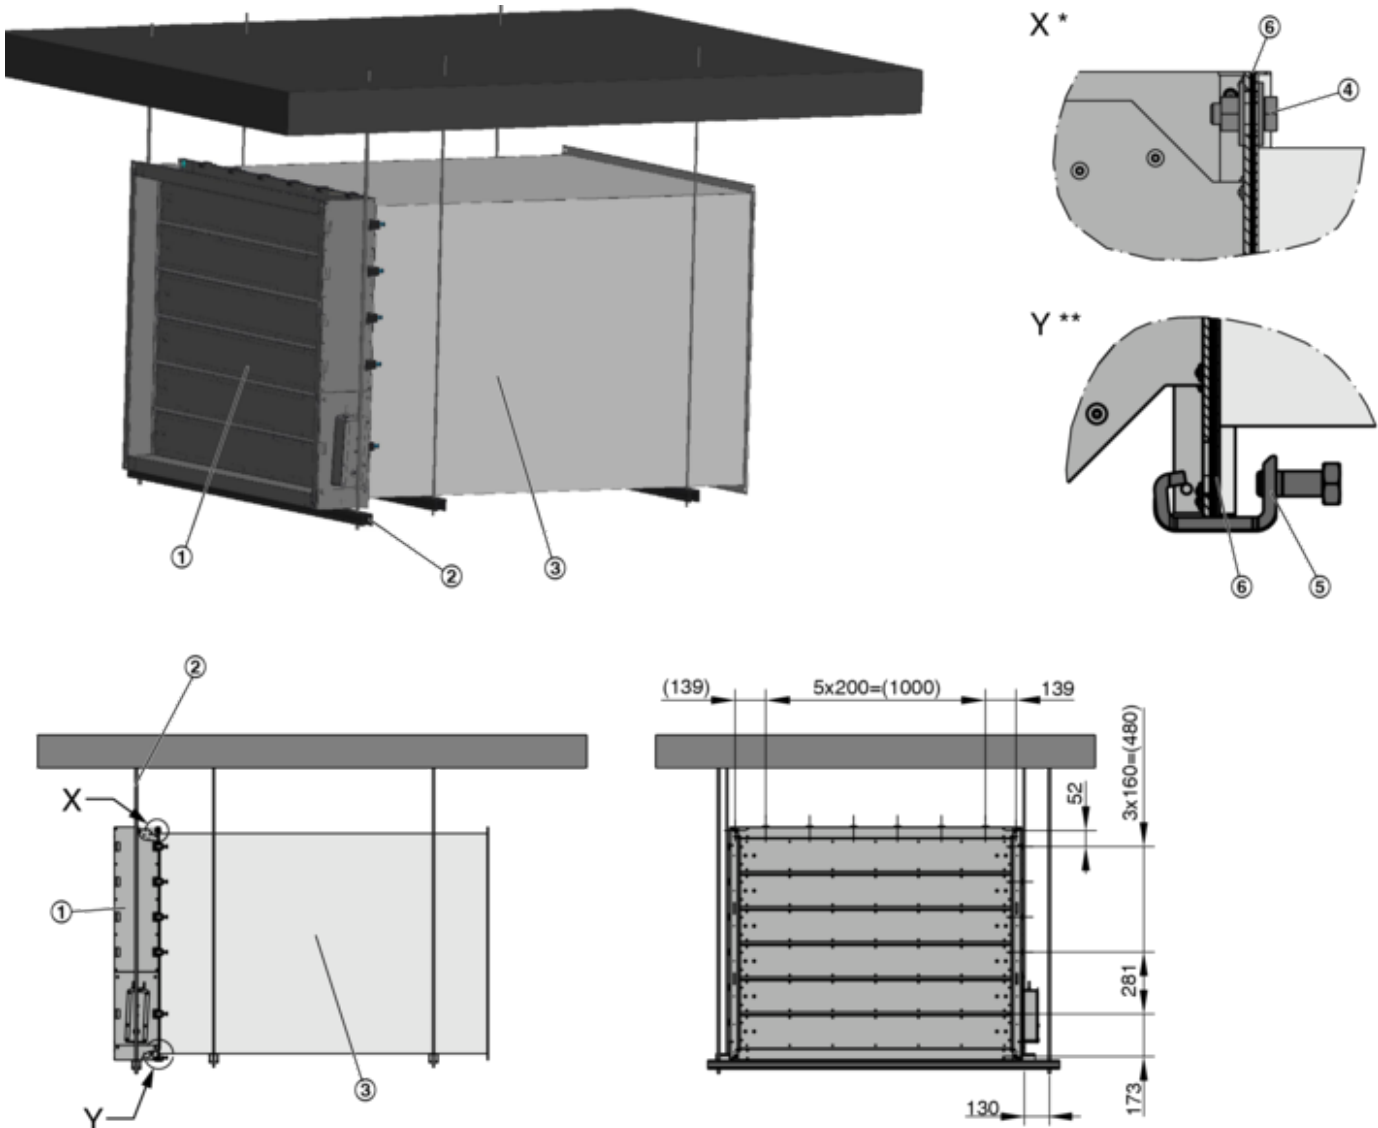


Fig. 11: Installation at the end of a horizontal smoke extract duct

- ① EK-JS
- ② Suspension ↪ 5.6 'Suspending the smoke control damper' on page 42
- ③ Sheet steel duct for increased operating temperatures
- ④ Hexagon bolts M8 with 2 washers and nuts (provided by others)
- ⑤ Duct clamps or self-drilling screws  $\varnothing$  5.5 x 22 mm (provided by others)
- ⑥ HT sealing tape (as accessories or provided by others)
- \* Duct clamps not shown
- \*\* Hexagon bolts M8 with 2 washers and nut, not shown

### Classification:

E<sub>600</sub>120 (v<sub>ed</sub>- i <-> o) S1500 C<sub>mod</sub> AA single



**Personnel:**

- Trained personnel

**Requirements:**

- Sheet steel duct for increased operating temperatures
  - The actuator must remain accessible for maintenance work after installation
1. ▶ Build and suspend the sheet steel duct ③ according to manufacturer's instructions.
  2. ▶ For sealing, apply HT sealing tape ⑥ to the flange of the smoke control damper ①.
  3. ▶ Create suspension ② for the smoke control damper ↪ *Chapter 5.6 'Suspending the smoke control damper' on page 42*.
  4. ▶ Screw smoke control damper to the sheet steel duct with hexagon bolts, washers and nuts ④.
  5. ▶ In addition, connect the smoke control damper with duct clamps ⑤ or alternatively with self-drilling screws ↪ *Chapter 6.1 'Smoke extract ducts' on page 43*.

## 5.4.4 On horizontal duct

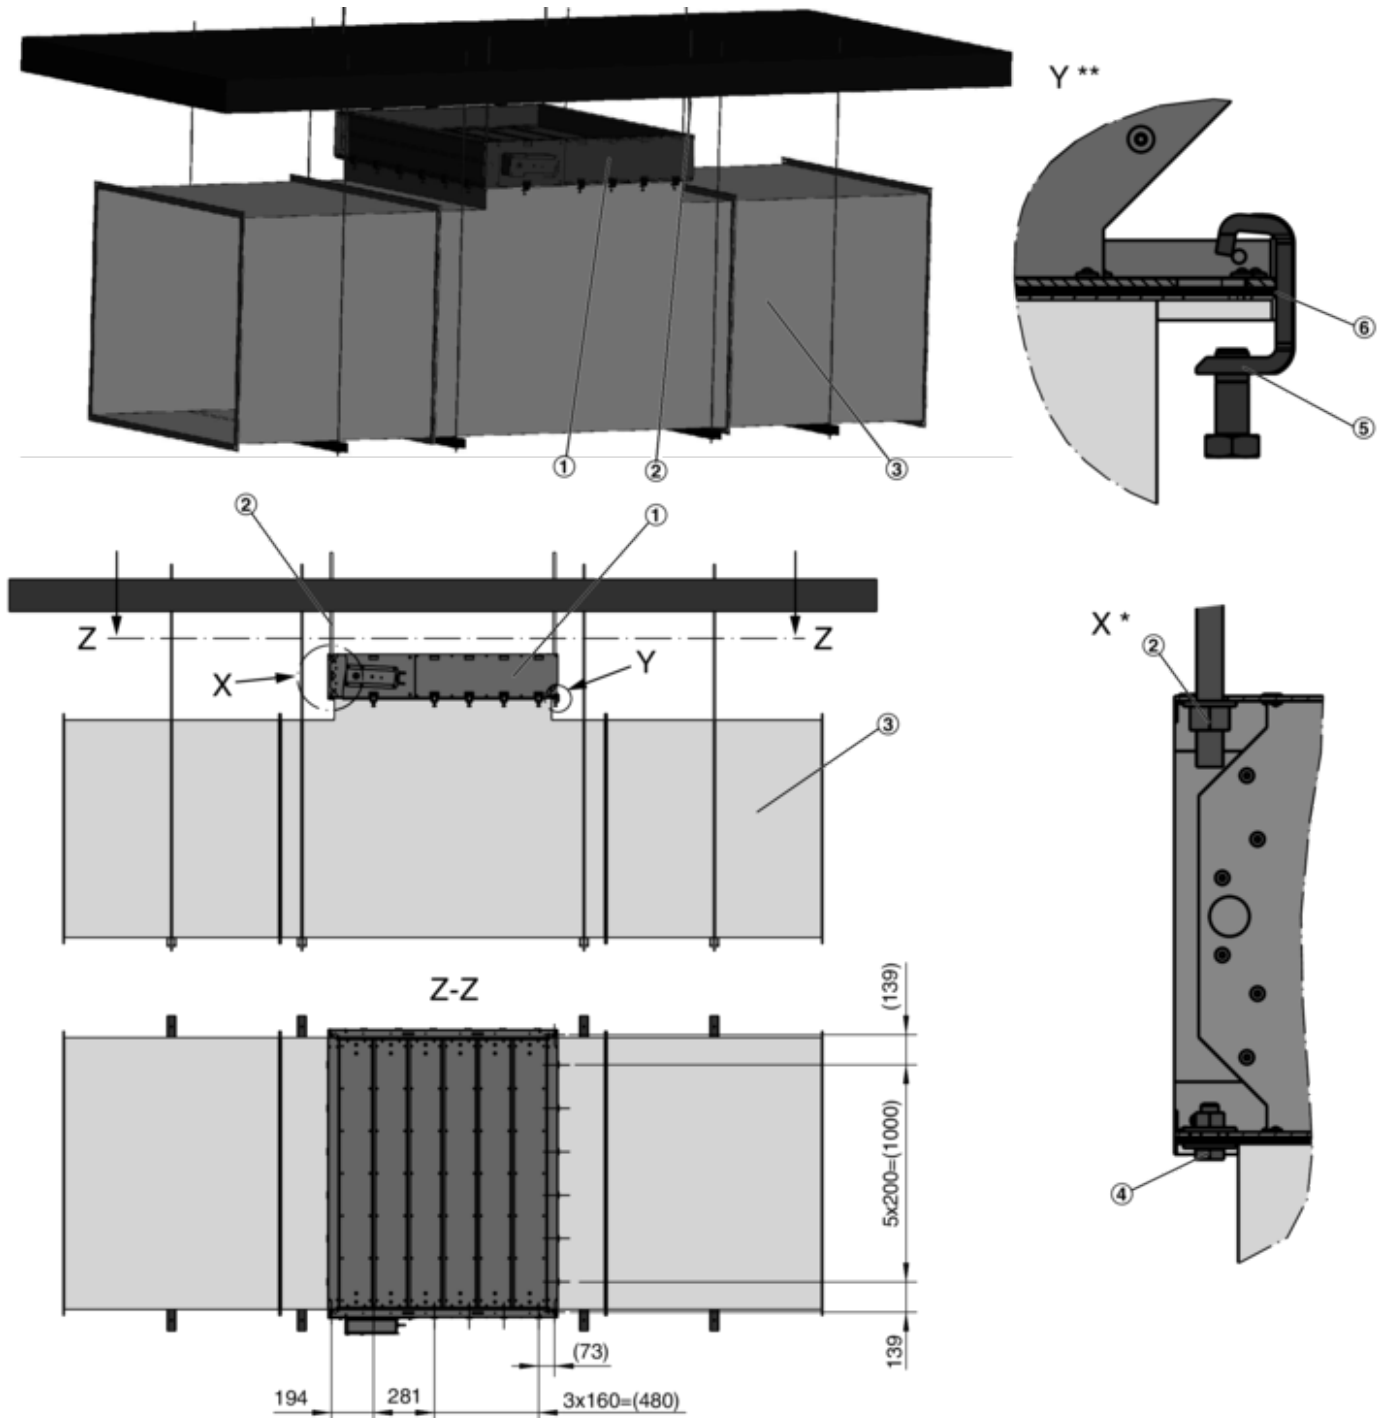


Fig. 12: Installation on a horizontal smoke extract duct

- ① EK-JS
- ② Suspension ↪ 5.6 'Suspending the smoke control damper' on page 42
- ③ Sheet steel duct for increased operating temperatures
- ④ Hexagon bolts M8 with 2 washers and nuts (provided by others)
- ⑤ Duct clamps or self-drilling screws  $\varnothing 5.5 \times 22$  mm (provided by others)
- ⑥ HT sealing tape (as accessories or provided by others)
- \* Duct clamps not shown
- \*\* Hexagon bolts M8 with 2 washers and nut, not shown

### Classification:

E<sub>600</sub>120 (h<sub>od</sub>- i <-> o) S1500 C<sub>mod</sub> AA single

**Personnel:**

- Trained personnel

**Requirements:**

- Sheet steel duct for increased operating temperatures
  - The actuator must remain accessible for maintenance work after installation
1. ▶ Build and suspend the sheet steel duct ③ according to manufacturer's instructions.
  2. ▶ For sealing, apply HT sealing tape ⑥ to the flange of the smoke control damper ①.
  3. ▶ Create suspension ② for the smoke control damper ↪ *Chapter 5.6 'Suspending the smoke control damper' on page 42* .
  4. ▶ Screw smoke control damper to the sheet steel duct with hexagon bolts, washers and nuts ④.
  5. ▶ In addition, connect the smoke control damper with duct clamps ⑤ or alternatively with self-drilling screws ↪ *Chapter 6.1 'Smoke extract ducts' on page 43* .

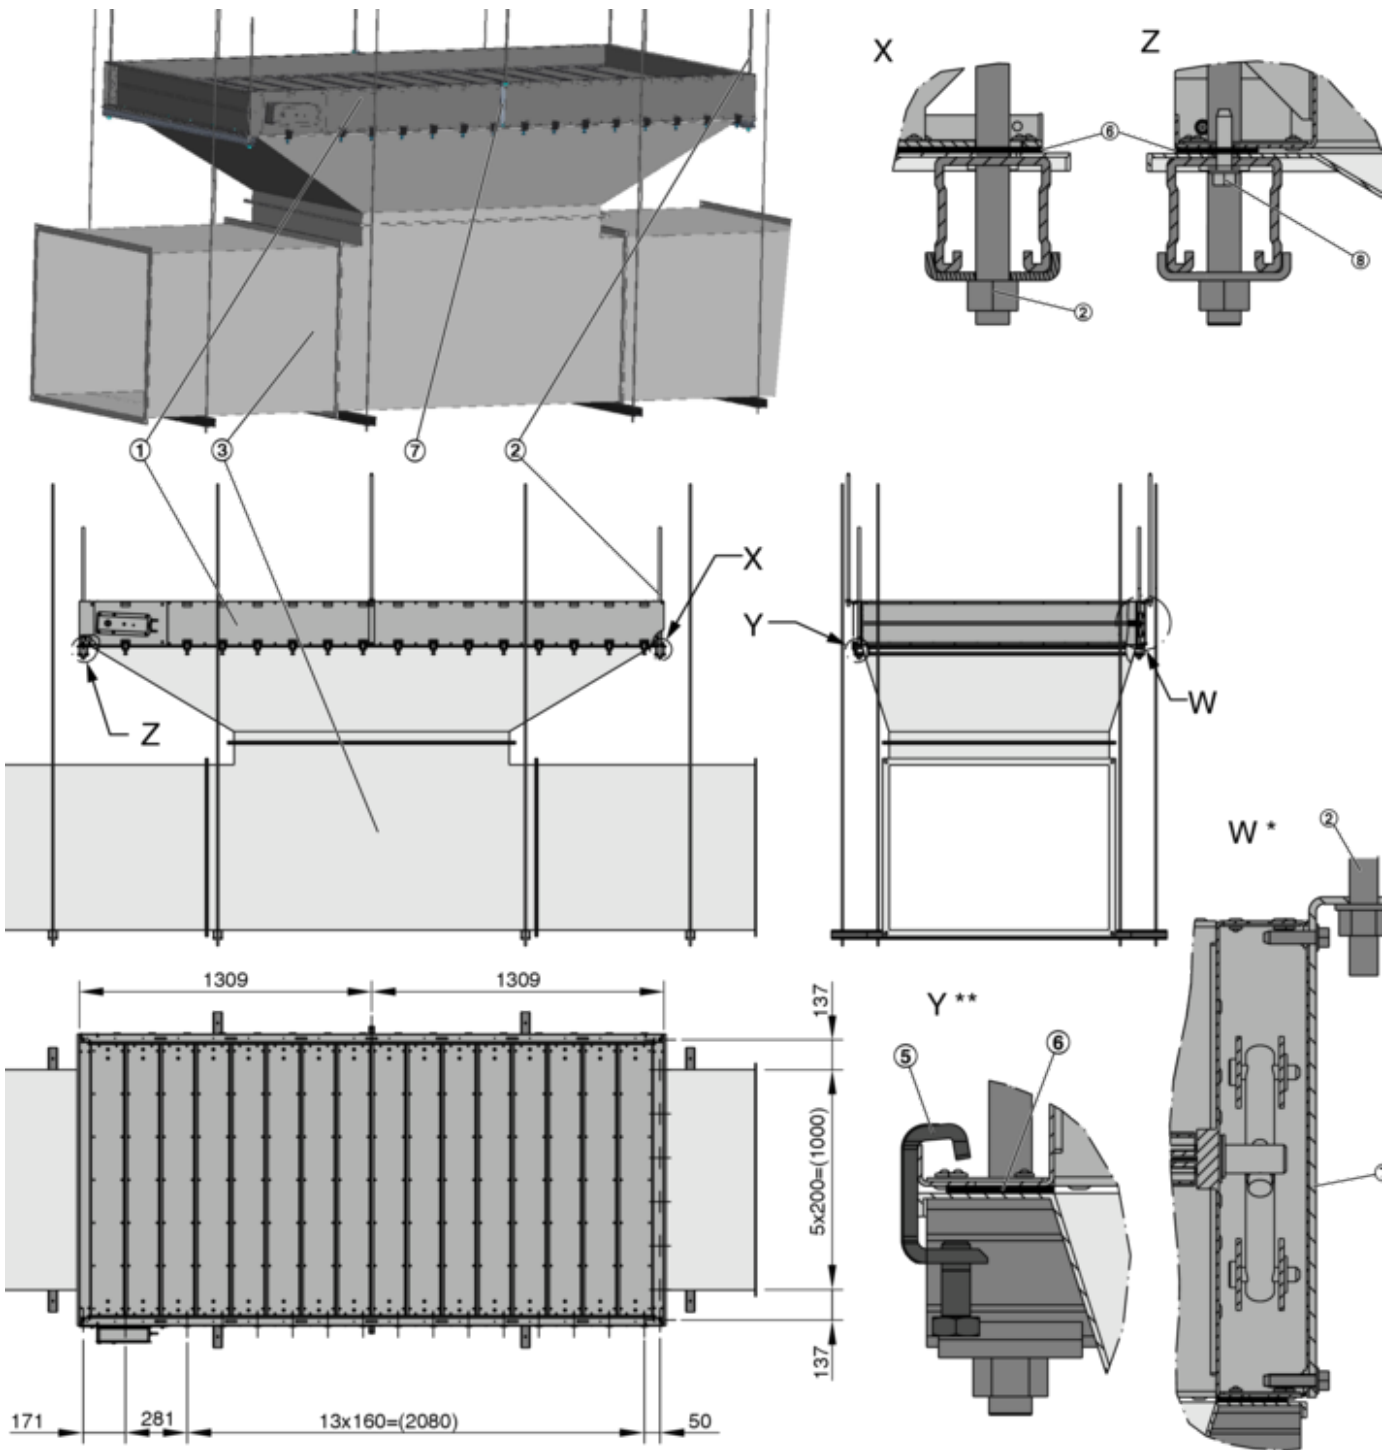


Fig. 13: Installation on a horizontal smoke extract duct

- ① EK-JS
- ② Suspension  $\varnothing$  5.6 'Suspending the smoke control damper' on page 42
- ③ Sheet steel duct for increased operating temperatures
- ④ Hexagon bolts M8 with 2 washers and nuts (provided by others)
- ⑤ Duct clamps or self-drilling screws  $\varnothing$  5.5 x 22 mm (provided by others)

- ⑥ HT sealing tape (as accessories or provided by others)
- ⑦ Suspension bracket fixed with 2 self-tapping screws,  $\varnothing$  5.6 'Suspending the smoke control damper' on page 42
- ⑧ Self-drilling screws  $\varnothing$  5.5 x 22 mm with  $\varnothing$ 6 mm washers (provided by others)
- \* Duct clamps not shown
- \*\* Hexagon bolts M8 with 2 washers and nut, not shown

**Classification:**

E<sub>600</sub>120 (h<sub>od</sub>- i <-> o) S1500 C<sub>mod</sub> AA single

**Personnel:**

- Trained personnel

**Requirements:**

- Sheet steel duct for increased operating temperatures
  - The actuator must remain accessible for maintenance work after installation
1. ▶ Build and suspend the sheet steel duct ③ according to manufacturer's instructions.
  2. ▶ For sealing, apply HT sealing tape ⑥ to the flange of the smoke control damper ①.
  3. ▶ Create suspension ② for the smoke control damper ↪ *Chapter 5.6 'Suspending the smoke control damper' on page 42*.
  4. ▶ Screw smoke control damper to the sheet steel duct with hexagon bolts, washers and nuts ④.
  5. ▶ In addition, connect the smoke control damper with duct clamps ⑤ or alternatively with self-drilling screws ↪ *Chapter 6.1 'Smoke extract ducts' on page 43*.

## 5.4.5 Under a horizontal duct

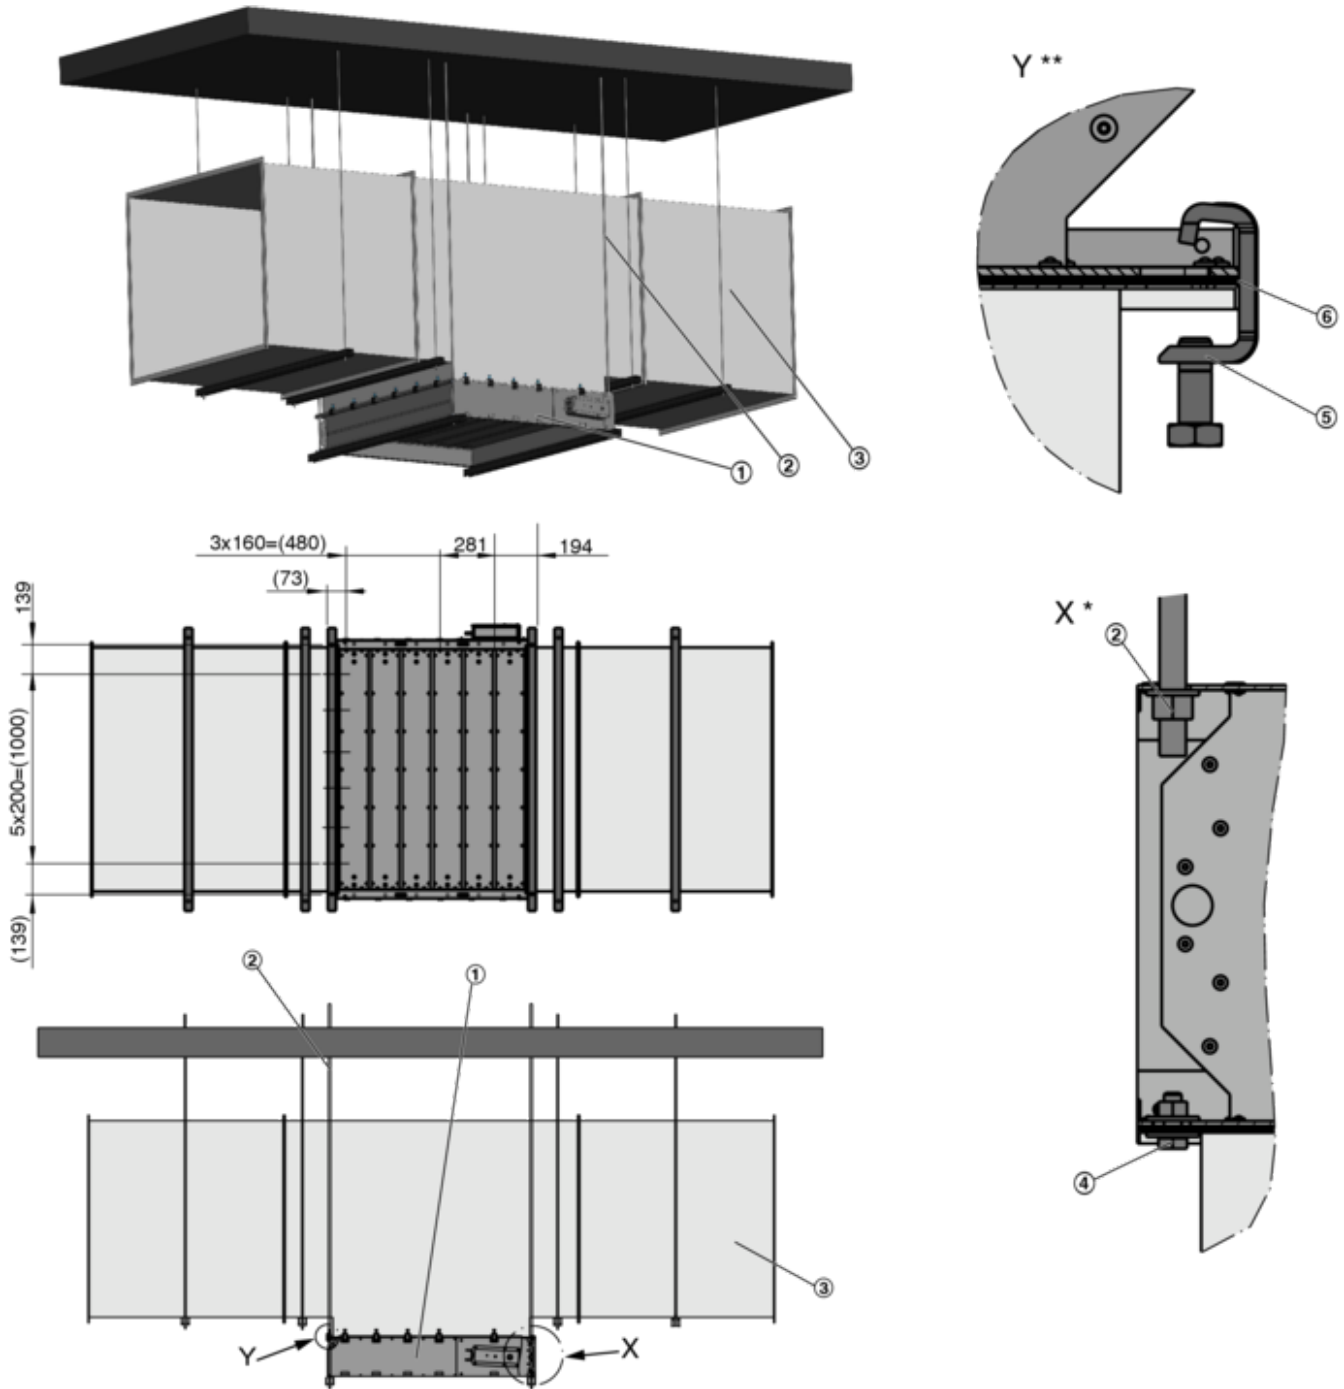


Fig. 14: Installation under a horizontal smoke extract duct

- ① EK-JS
  - ② Suspension ↪ 5.6 'Suspending the smoke control damper' on page 42
  - ③ Sheet steel duct for increased operating temperatures
  - ④ Hexagon bolts M8 with 2 washers and nuts (provided by others)
  - ⑤ Duct clamps or self-drilling screws  $\varnothing$  5.5 x 22 mm (provided by others)
  - ⑥ HT sealing tape (as accessories or provided by others)
- \* Duct clamps not shown  
 \*\* Hexagon bolts M8 with 2 washers and nut, not shown

### Classification:

E<sub>600</sub>120 (h<sub>od</sub>- i <-> o) S1500 C<sub>mod</sub> AA single

**Personnel:**

- Trained personnel

**Requirements:**

- Sheet steel duct for increased operating temperatures
  - The actuator must remain accessible for maintenance work after installation
1. ▶ Build and suspend the sheet steel duct ③ according to manufacturer's instructions.
  2. ▶ For sealing, apply HT sealing tape ⑥ to the flange of the smoke control damper ①.
  3. ▶ Create suspension ② for the smoke control damper ↪ *Chapter 5.6 'Suspending the smoke control damper' on page 42* .
  4. ▶ Screw smoke control damper to the sheet steel duct with hexagon bolts, washers and nuts ④.
  5. ▶ In addition, connect the smoke control damper with duct clamps ⑤ or alternatively with self-drilling screws ↪ *Chapter 6.1 'Smoke extract ducts' on page 43* .

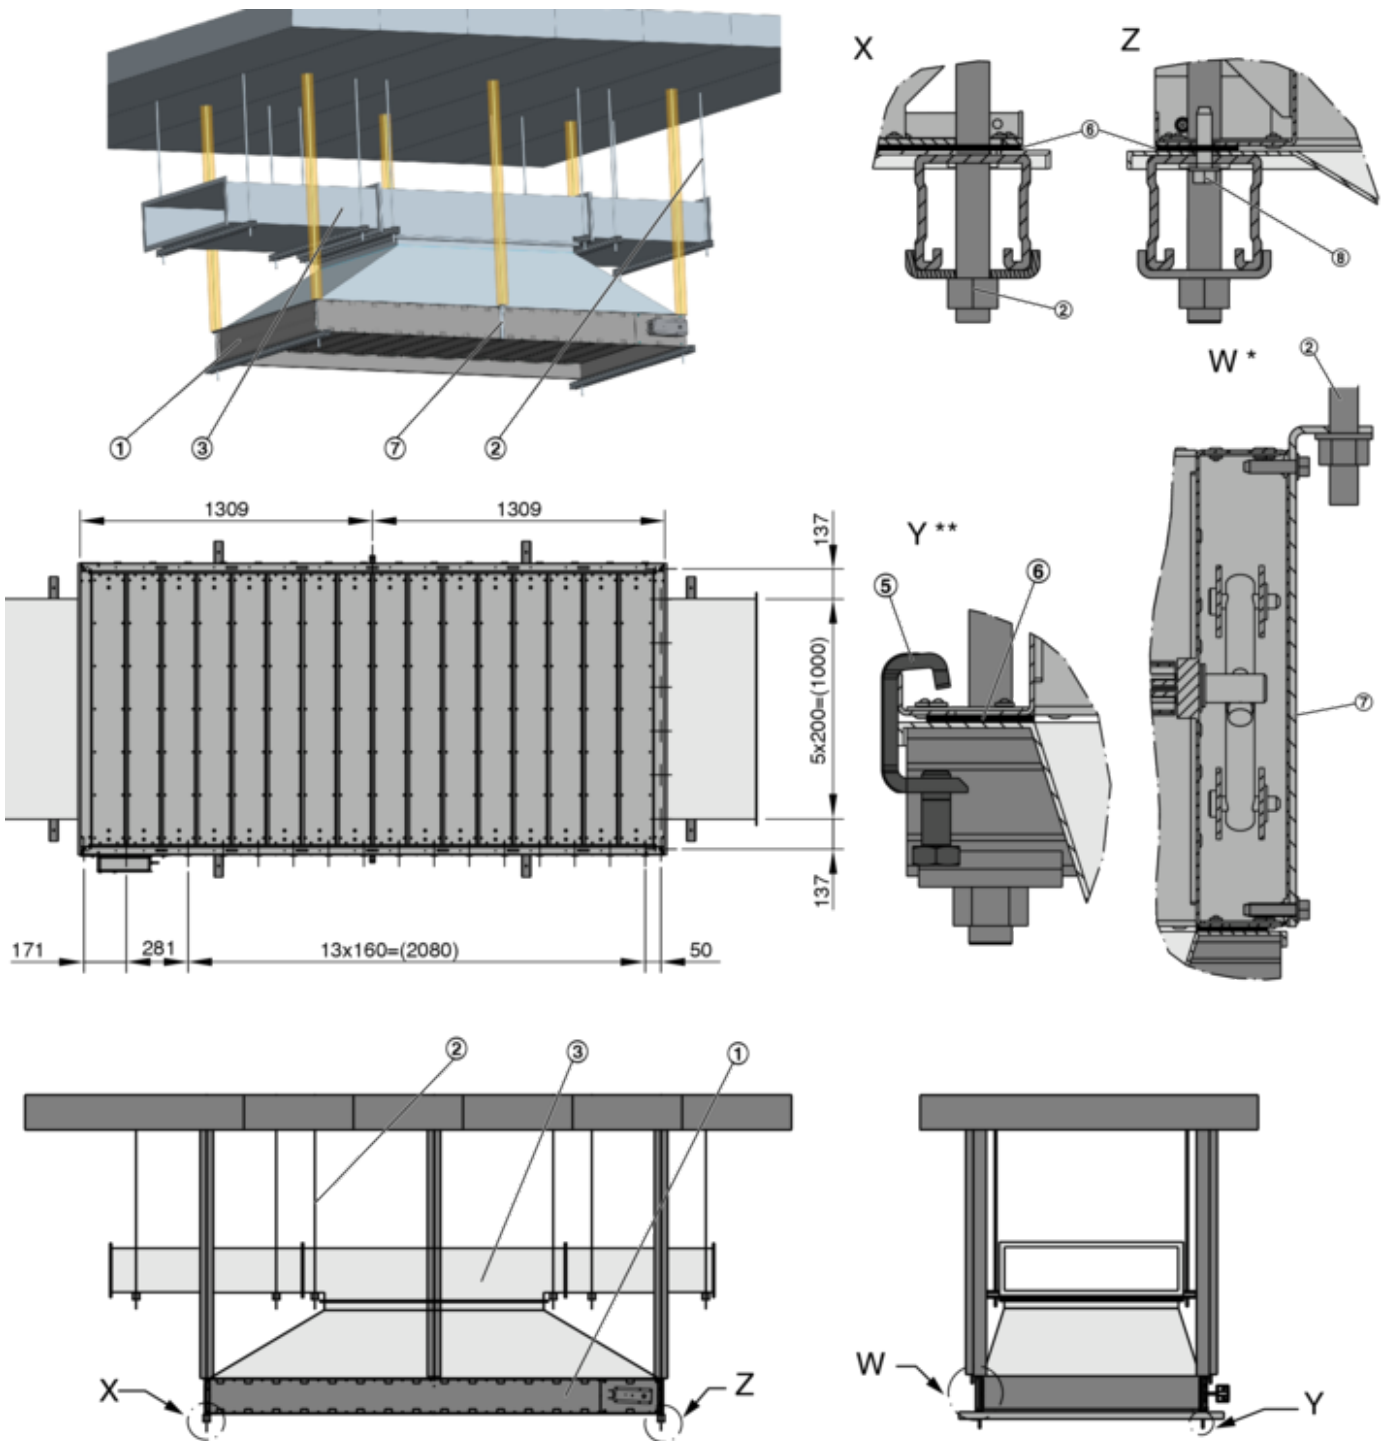


Fig. 15: Installation under a horizontal smoke extract duct

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>① EK-JS</li> <li>② Suspension <math>\varnothing</math> 5.6 'Suspending the smoke control damper' on page 42</li> <li>③ Sheet steel duct for increased operating temperatures</li> <li>④ Hexagon bolts M8 with 2 washers and nuts (provided by others)</li> <li>⑤ Duct clamps or self-drilling screws <math>\varnothing</math> 5.5 x 22 mm (provided by others)</li> </ul> | <ul style="list-style-type: none"> <li>⑥ HT sealing tape (as accessories or provided by others)</li> <li>⑦ Suspension bracket fixed with 2 self-tapping screws, <math>\varnothing</math> 5.6 'Suspending the smoke control damper' on page 42</li> <li>⑧ Self-drilling screws <math>\varnothing</math> 5.5 x 22 mm with <math>\varnothing</math>6 mm washers (provided by others)</li> <li>* Duct clamps not shown</li> <li>** Hexagon bolts M8 with 2 washers and nut, not shown</li> </ul> |
|--|--|



**Classification:**

E<sub>600</sub>120 (h<sub>od</sub>- i <-> o) S1500 C<sub>mod</sub> AA single

**Personnel:**

- Trained personnel

**Requirements:**

- Sheet steel duct for increased operating temperatures
  - The actuator must remain accessible for maintenance work after installation
1. ▶ Build and suspend the sheet steel duct ③ according to manufacturer's instructions.
  2. ▶ For sealing, apply HT sealing tape ⑥ to the flange of the smoke control damper ①.
  3. ▶ Create suspension ② for the smoke control damper ↪ *Chapter 5.6 'Suspending the smoke control damper' on page 42* .
  4. ▶ Screw smoke control damper to the sheet steel duct with hexagon bolts, washers and nuts ④.
  5. ▶ In addition, connect the smoke control damper with duct clamps ⑤ or alternatively with self-drilling screws ↪ *Chapter 6.1 'Smoke extract ducts' on page 43* .

## 5.4.6 On a vertical duct

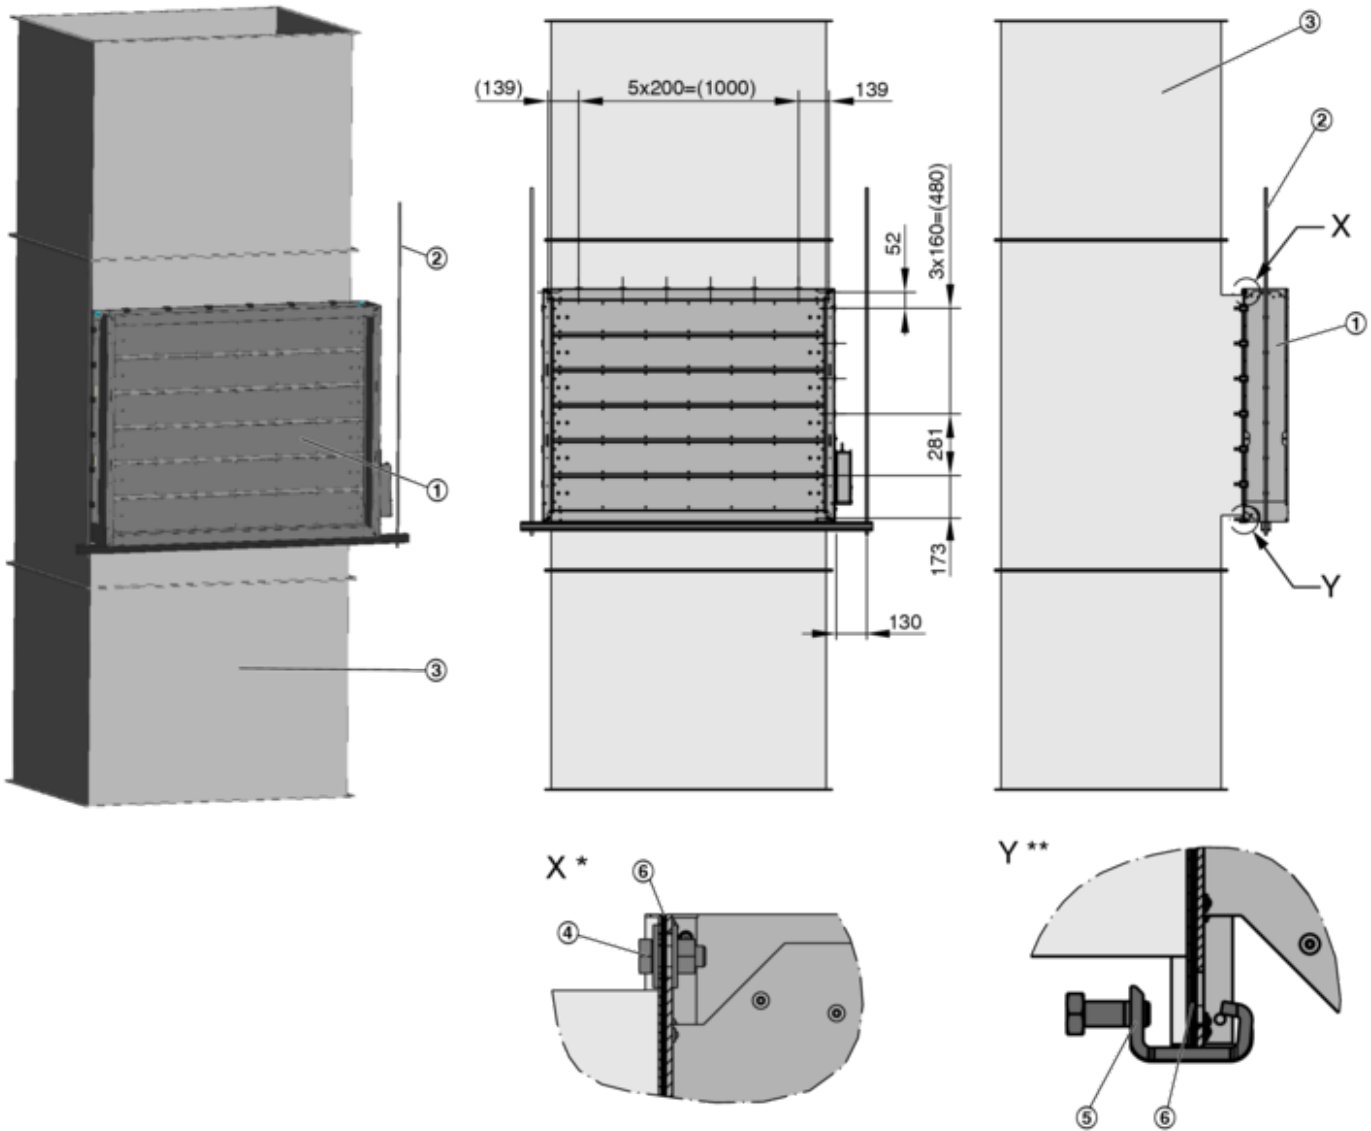


Fig. 16: Installation on a vertical smoke extract duct

- ① EK-JS
- ② Suspension ↪ 5.6 'Suspending the smoke control damper' on page 42
- ③ Sheet steel duct for increased operating temperatures
- ④ Hexagon bolts M8 with 2 washers and nuts (provided by others)

- ⑤ Duct clamps or self-drilling screws  $\varnothing 5.5 \times 22$  mm (provided by others)
- ⑥ HT sealing tape (as accessories or provided by others)
- \* Duct clamps not shown
- \*\* Hexagon bolts M8 with 2 washers and nut, not shown

### Classification:

E<sub>600</sub>120 (v<sub>ed</sub>- i <-> o) S1500 C<sub>mod</sub> AA single

**Personnel:**

- Trained personnel

**Requirements:**

- Sheet steel duct for increased operating temperatures
  - The actuator must remain accessible for maintenance work after installation
1. ▶ Build and suspend the sheet steel duct ③ according to manufacturer's instructions.
  2. ▶ For sealing, apply HT sealing tape ⑥ to the flange of the smoke control damper ①.
  3. ▶ Create suspension ② for the smoke control damper ↪ *Chapter 5.6 'Suspending the smoke control damper' on page 42* .
  4. ▶ Screw smoke control damper to the sheet steel duct with hexagon bolts, washers and nuts ④.
  5. ▶ In addition, connect the smoke control damper with duct clamps ⑤ or alternatively with self-drilling screws ↪ *Chapter 6.1 'Smoke extract ducts' on page 43* .

## 5.4.7 In a vertical duct

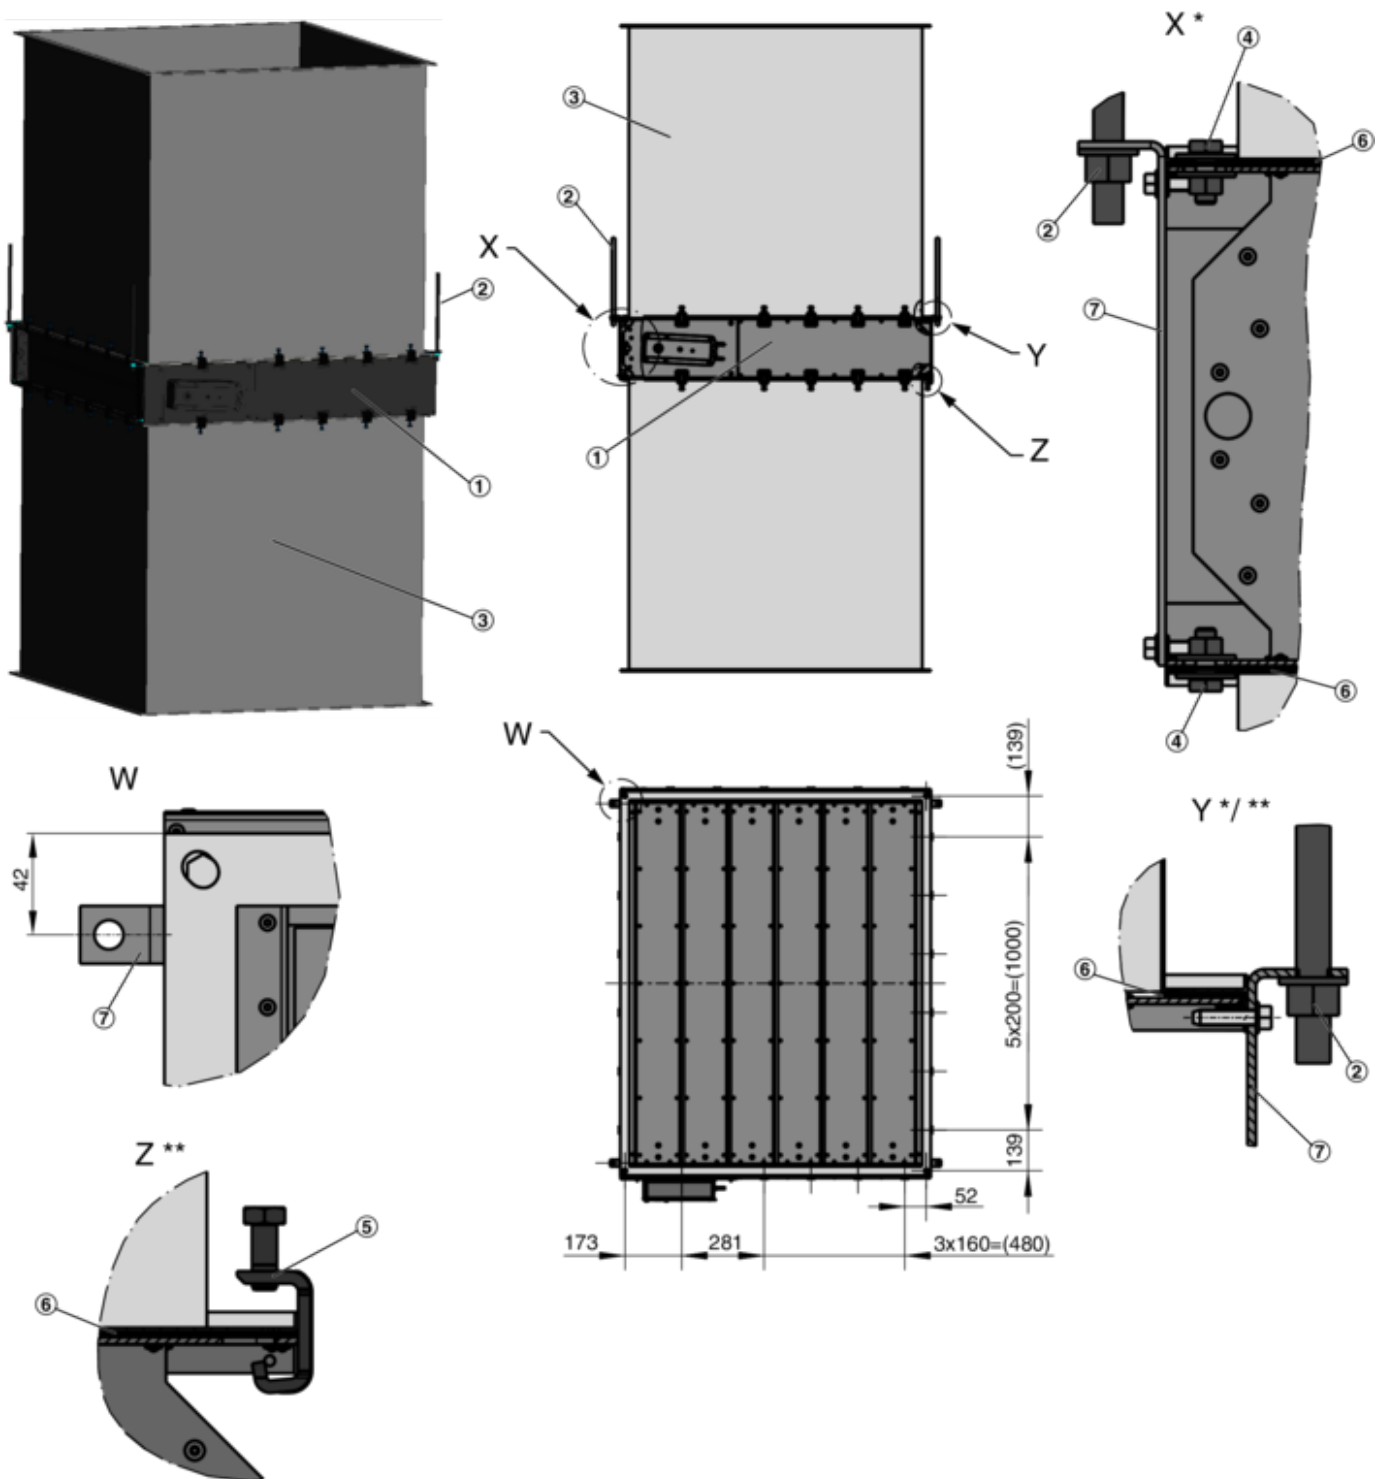


Fig. 17: Installation in a vertical smoke extract duct

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>① EK-JS</li> <li>② Suspension ↪ 5.6 'Suspending the smoke control damper' on page 42</li> <li>③ Sheet steel smoke extract duct</li> <li>④ Hexagon bolts M8 with 2 washers and nuts (provided by others)</li> <li>⑤ Duct clamps or self-drilling screws <math>\varnothing</math> 5.5 x 22 mm (provided by others)</li> </ul> | <ul style="list-style-type: none"> <li>⑥ HT sealing tape (as accessories or provided by others)</li> <li>⑦ Suspension bracket fixed with 2 self-tapping screws, ↪ 5.6 'Suspending the smoke control damper' on page 42</li> <li>* Duct clamps not shown</li> <li>** Hexagon bolts M8 with 2 washers and nut, not shown</li> </ul> |
|--|---|

**Classification:**

E<sub>600</sub>120 (h<sub>od</sub>- i <-> o) S1500 C<sub>mod</sub> AA single

**Personnel:**

- Trained personnel

**Requirements:**

- Sheet steel duct for increased operating temperatures
  - The actuator must remain accessible for maintenance work after installation
1. ▶ Build and suspend the sheet steel duct ③ according to manufacturer's instructions.
  2. ▶ For sealing, apply HT sealing tape ⑥ to the flange of the smoke control damper ①.
  3. ▶ Create suspension ② for the smoke control damper ↪ *Chapter 5.6 'Suspending the smoke control damper' on page 42* .
  4. ▶ Screw smoke control damper to the sheet steel duct with hexagon bolts, washers and nuts ④.
  5. ▶ In addition, connect the smoke control damper with duct clamps ⑤ or alternatively with self-drilling screws ↪ *Chapter 6.1 'Smoke extract ducts' on page 43* .

## 5.4.8 At the end of a vertical duct

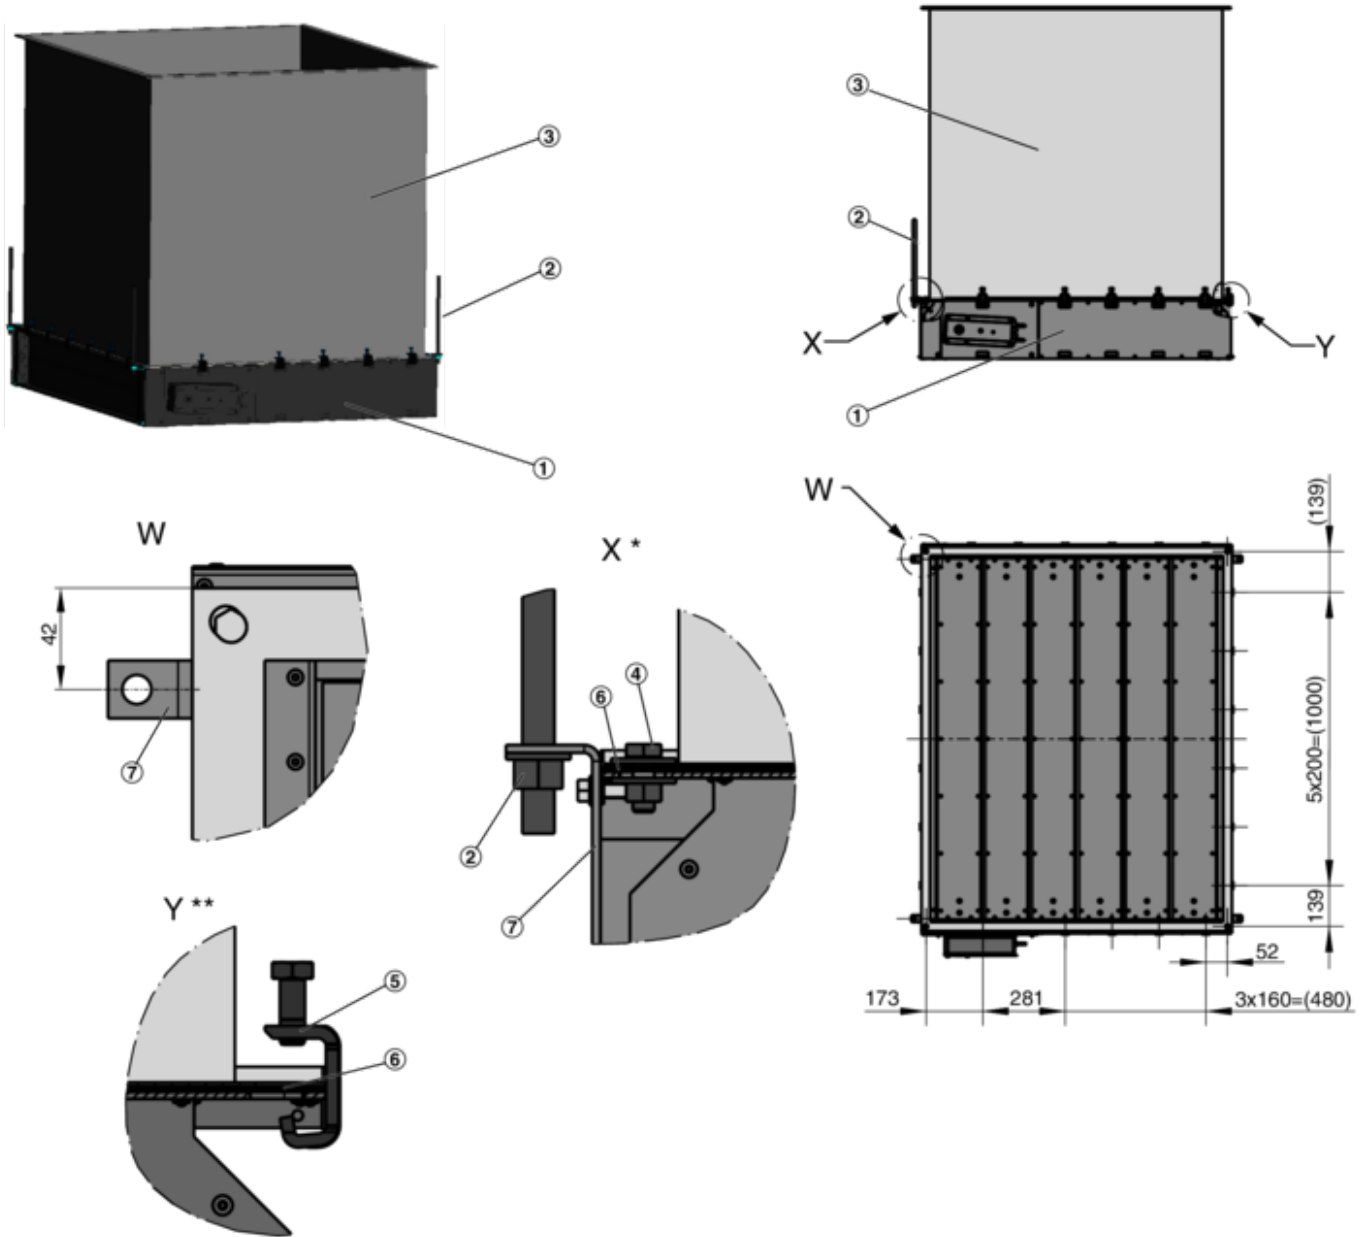


Fig. 18: Installation at the end of a vertical smoke extract duct

- ① EK-JS
  - ② Suspension ↗ 5.6 'Suspending the smoke control damper' on page 42
  - ③ Sheet steel smoke extract duct
  - ④ Hexagon bolts M8 with 2 washers and nuts (provided by others)
  - ⑤ Duct clamps or self-drilling screws  $\varnothing$  5.5 x 22 mm (provided by others)
  - ⑥ HT sealing tape (as accessories or provided by others)
  - ⑦ Suspension bracket fixed with 2 self-tapping screws, ↗ 5.6 'Suspending the smoke control damper' on page 42
- \* Duct clamps not shown  
 \*\* Hexagon bolts M8 with 2 washers and nut, not shown

### Classification:

E<sub>600</sub>120 (h<sub>od</sub>- i <-> o) S1500 C<sub>mod</sub> AA single

**Personnel:**

- Trained personnel

**Requirements:**

- Sheet steel duct for increased operating temperatures
  - The actuator must remain accessible for maintenance work after installation
1. ▶ Build and suspend the sheet steel duct ③ according to manufacturer's instructions.
  2. ▶ For sealing, apply HT sealing tape ⑥ to the flange of the smoke control damper ①.
  3. ▶ Create suspension ② for the smoke control damper ↪ *Chapter 5.6 'Suspending the smoke control damper' on page 42* .
  4. ▶ Screw smoke control damper to the sheet steel duct with hexagon bolts, washers and nuts ④.
  5. ▶ In addition, connect the smoke control damper with duct clamps ⑤ or alternatively with self-drilling screws ↪ *Chapter 6.1 'Smoke extract ducts' on page 43* .

Solid smoke extract duct > On a vertical solid duct

## 5.5 Solid smoke extract duct

### 5.5.1 On a vertical solid duct

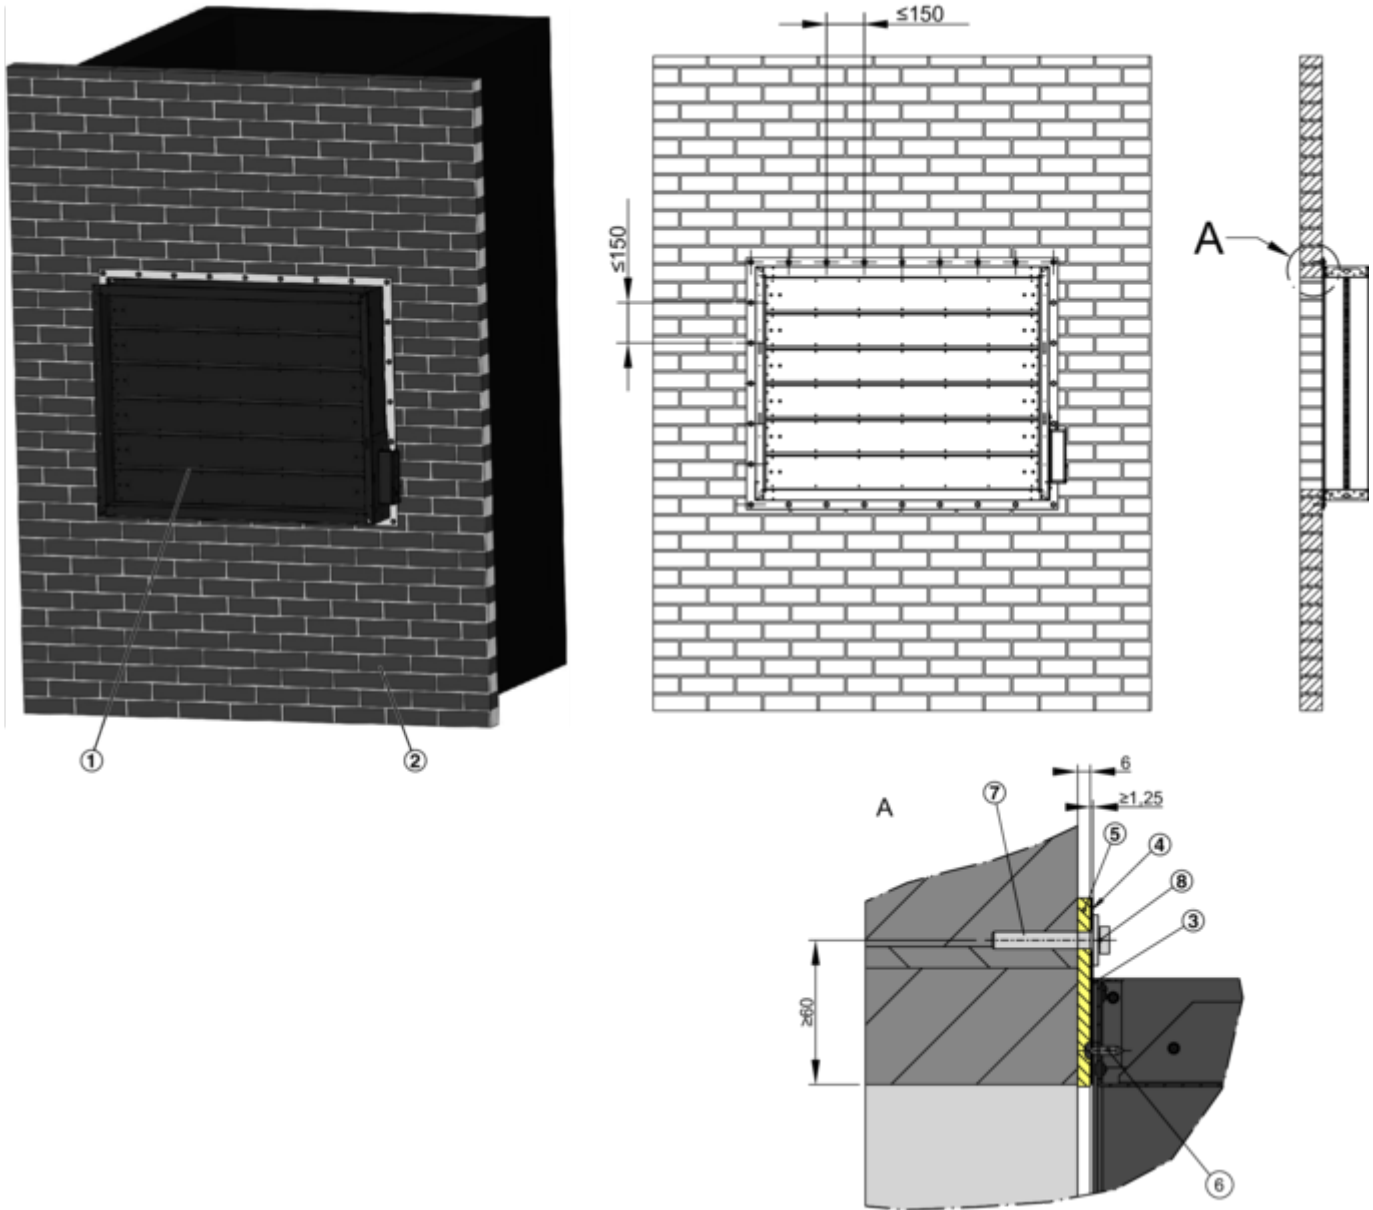


Fig. 19: Installation in a vertical solid smoke extract duct

- ① EK-JS
- ② Solid shaft wall as part of a smoke extract duct
- ③ HT sealing tape (accessory) or to be provided by others
- ④ Flange (to be provided by others),  $\zeta$  60
- ⑤ HT sealing tape (to be provided by others)
- ⑥ Self-tapping screws  $\varnothing$  4.2 x 16 mm (to be provided by others)
- ⑦ Wallplug with fire safety engineering certification and threaded bolts M8 (to be provided by others)
- ⑧ Washer, nut M8 (to be provided by others)

#### Classification:

E<sub>600</sub>120 (v<sub>ed</sub>- i <-> o) S1500 C<sub>mod</sub> AA single



**Personnel:**

- Trained personnel

**Requirements:**

- Solid shaft wall as part of a smoke extract duct
  - The actuator must remain accessible for maintenance work after installation
1. ▶ To seal between the EK-JS ① and the flange ④, apply HT sealing tape ③ to the damper housing.
  2. ▶ Fix the flange ④ (to be provided by others) to the EK-JS with self-tapping screws ⑥.
  3. ▶ For sealing, stick the HT sealing tape ⑤ onto the flange.
  4. ▶ Drill the holes on the shaft wall according to the hole pattern on the flange, maximum distance between the holes 150 mm. Insert the wallplugs into the holes.
  5. ▶ Screw the smoke control damper to the solid smoke extract duct with washers and nuts ⑧.

## 5.6 Suspending the smoke control damper

### 5.6.1 General information

Smoke control dampers can be suspended from solid ceiling slabs using adequately sized threaded rods. Load the suspension system only with the weight of the smoke control damper.

Smoke extract ducts must be suspended separately.

Suspension systems longer than > 1.5 m require fire-resistant insulation.

### Dimensioning of threaded rods

Threads	M8	M10	M12	M14	M16	M20
Fmax [N] per threaded rod	219	348	505	690	942	1470
Maximum loading [kg] per threaded rod	22	35	52	70	96	150

### 5.6.2 Fixing to the ceiling

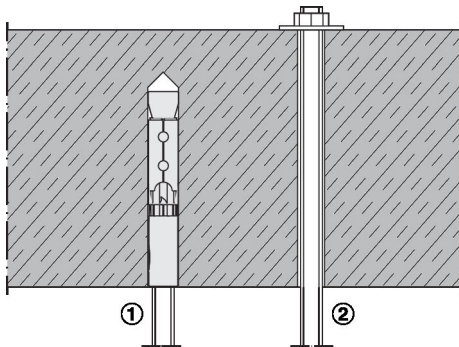


Fig. 20: Fixing to the ceiling

- 1 Fixing with fire safety dowels
- 2 Push-through installation

According to the ceiling design, use only fire safety dowels with suitability certificate. Alternatively, suspensions without dowels can be done as push-through installation, in which case the threaded rods are fastened with nuts and washers.

### 5.6.3 Suspending the smoke control damper

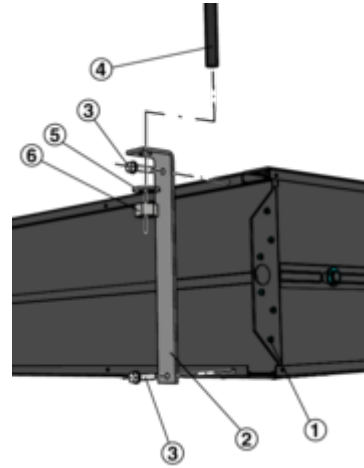


Fig. 21: EK-JS suspension with suspension bracket

- ① Smoke control damper EK-JS
- ② Suspension bracket (accessory 18, 19)\*
- ③ Self-tapping screws (in scope of delivery of suspension bracket)
- ④ Threaded rod M12
- ⑤ Washer M12, galvanised steel
- ⑥ Nut M12, galvanised steel

\* When using a cover grille, the suspension bracket can be attached rotated by 180°.

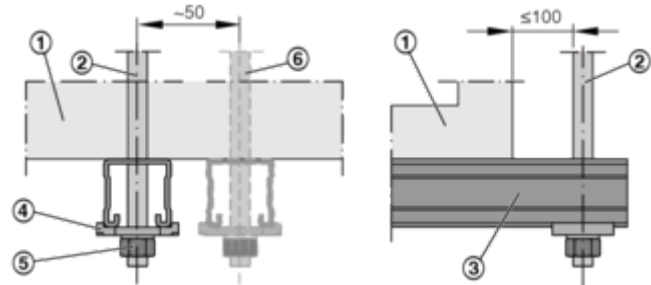


Fig. 22: Suspending the smoke control damper

- ① Smoke control damper
- ② Threaded rod ↪ 'Dimensioning of threaded rods' on page 42
- ③ Profile rail Hilti MT 40T or 50 or equivalent
- ④ Fixing plate Hilti MQZ-L or equivalent
- ⑤ Nut, steel galvanised
- ⑥ 2nd suspension (only if necessary)

## 6 Smoke extract duct and cover grille

### 6.1 Smoke extract ducts

#### Construction of the duct

EK-JS smoke control dampers are allowed to be used with sheet steel smoke extract ducts for individual sections that meet the following criteria:

- Tested according to DIN EN 1366-9, 120 min. at 600 °C
- Pressure level 3 according to DIN EN 1366-9 for negative pressure down to -1500 Pa and positive pressure up to +500 Pa

#### Smoke extract ducts with national general building inspectorate licences



Smoke extract ducts can also be connected with a national general building inspectorate licence or a national general appraisal certificate. If the smoke control damper is not exposed to mechanical forces, the functional stability of the smoke control damper is not affected (connection according to assembly and operating manual of the smoke control damper). The sizing of the smoke extract duct used remains the responsibility of the system installer and the system owner and must be approved with the respective national authority.

#### Sheet steel smoke extract duct

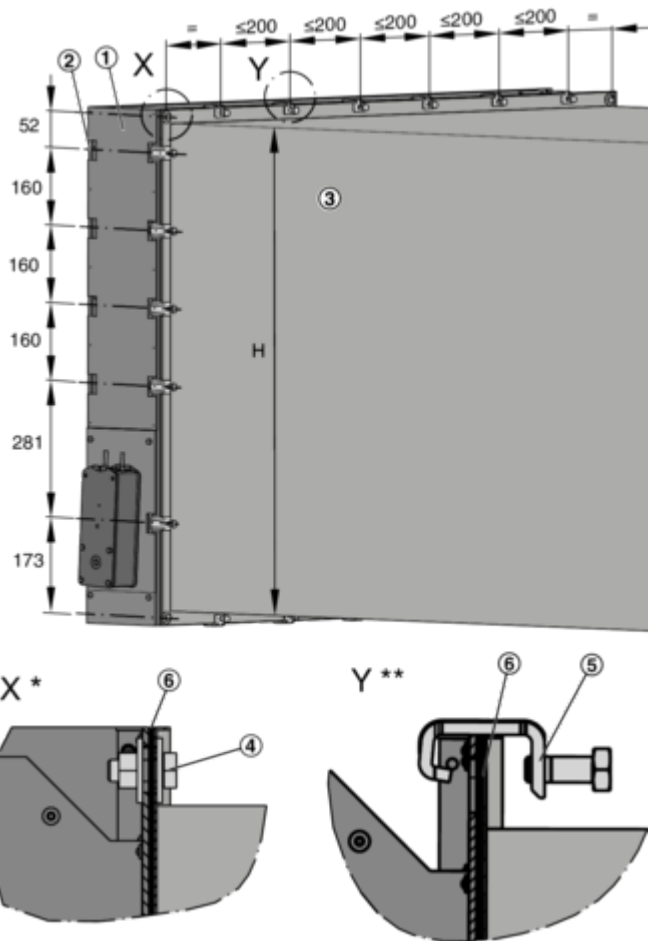


Fig. 23: EK-JS connection to air duct with duct clips

- ① EK-JS
  - ② Linkage cover with recess for duct clips
  - ③ Smoke extract duct
  - ④ Fixing screws M8 with washers and nut (to be provided by others)
  - ⑤ Duct clips or self-tapping screws  $\varnothing 5.5 \times 22$  mm (to be provided by others)
  - ⑥ HT sealing tape (accessories or to be provided by others)
- \* Duct clips not shown  
 \*\* Hexagon bolts M8 with 2 washers and nut not shown

Place the duct clips on the drive side in the recesses of the linkage cover.

On the other sides, the duct clips can be set freely. Maximum distance 200 mm.

## 6.2 Cover grilles

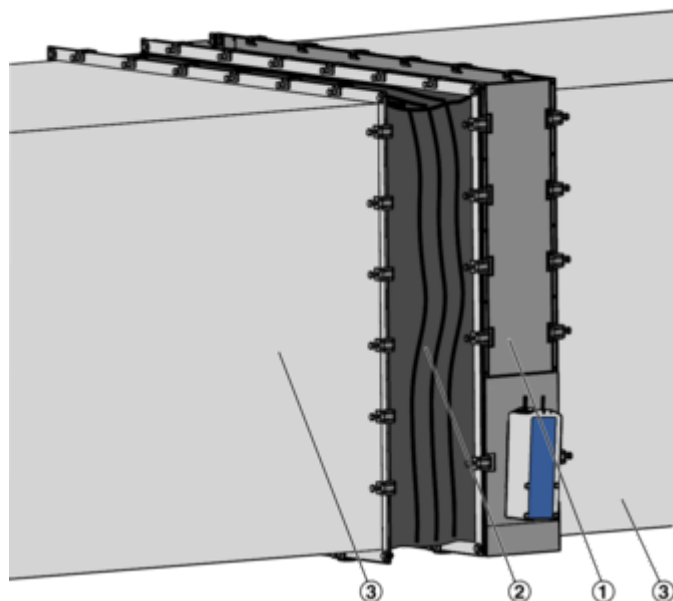


Fig. 24: EK-JS connection to a sheet steel smoke extract duct

- ① EK-JS
- ② Flexible connector (by others)
- ③ Sheet steel smoke extract duct (by others)

As ducts may expand in the event of a fire, we recommend using flexible connectors at one end when connecting a sheet steel smoke extract duct which is attached at both ends. The flexible connectors should meet the specifications for the sheet steel smoke extract duct. Be sure to follow the manufacturer's instructions.

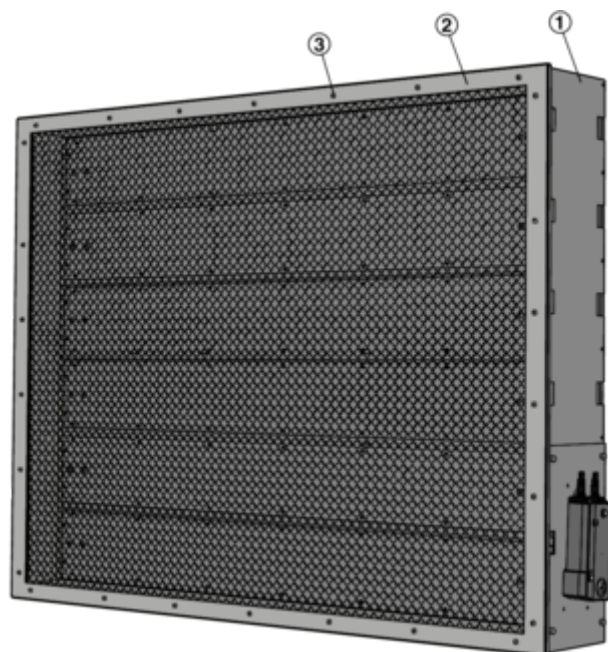


Fig. 25: EK-JS with a cover grille

- ① EK-JS
- ② Cover grilles
- ③ Fixing screws

If no smoke extract duct is connected to the smoke control damper, it will be necessary to protect the end with a cover grille (accessory or to be provided by others: galvanised steel, mesh aperture  $\leq 20$  mm).

## 7 Electrical connection

### 7.1 General safety instructions

#### Personnel:

- Skilled qualified electrician

 **DANGER!**

Danger of electric shock! Do not touch any live components! Electrical equipment carries a dangerous electrical voltage.

- Only skilled qualified electricians are allowed to work on the electrical system.
- Switch off the power supply before working on any electrical equipment.

### 7.2 General instructions for wiring and connection to the MCE

#### Supply voltage

- The smoke control damper may be equipped with a 230 V AC or a 24 V AC/DC actuator. See the performance data on the actuator rating plate.
- Several actuators can be connected in parallel, as long as the performance specifications and switching thresholds are taken into consideration.
- The electrical connection is made using the connection examples shown in the following sections.

#### Auxiliary switch

- During use, it must be considered that the contacts of the auxiliary switches can no longer be used in the milliampere range after one-time wiring with higher current.
- For the auxiliary switches, a combination of mains voltage and protective extra-low voltage is not permitted.

#### Functional integrity of electrical wiring systems

Electrical wiring systems for the power supply of smoke control dampers, for example in mechanical smoke extract systems and pressurisation systems, must be designed with a functional integrity of at least 90 minutes. If electrical wiring systems are installed in safety stairwells, functional integrity must be ensured for at least 30 minutes.

#### Actuators with 24 V AC/DC

Safety transformers must be used for actuators. The connecting cables are fitted with plugs. This ensures quick and easy connection to the TROX AS-i bus system. For connection to the terminals, shorten the connecting cable.

### 7.3 Actuators

#### Torque table

The actuators of the EK-JS are selected depending on the size, the torque and the order option (order code detail). The following tables can be used to select the corresponding actuator. Select the next larger dimension for intermediate sizes.

For wiring examples and technical data, see the following pages.

7.3.1 B24

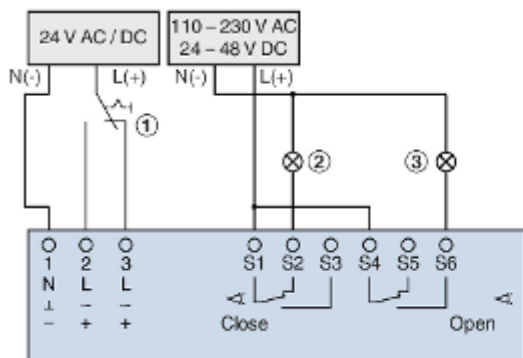


Fig. 26: Wiring example 24 V AC / DC

- ① Switch for opening and closing, to be provided by others
- ② Indicator light for CLOSED position, to be provided by others
- ③ Indicator light for OPEN position, to be provided by others

Technical data for OPEN/CLOSE actuators

Order code detail		B24		
Actuator		BEN24-ST TR	BEE24-ST TR	BE24-ST TR
Supply voltage		AC 19.2 – 28.8 V, 50/60 Hz / DC 21.6 – 28.8 V, 50/60 Hz		
Power consumption operation		3 W	2.5 W	12 W
Power consumption – when idle		0.1 W		0.5 W
Power consumption rating		6 VA	5 VA	18 VA
		8.2 A, I <sub>max.</sub> (5 ms)		8.2 A, I <sub>max.</sub> (5 ms)
Torque		15 Nm	25 Nm	40 Nm
Run time		< 30 s (90°)	< 60 s (90°)	< 60 s (90°)
Limit switch	Type of contact	2 changeover contacts		
	Switch rating	1 mA – 3 A (0.5 A inductive),		1 mA – 6 A (0.5 A inductive),
	Switching voltage	5 VDC – 250 VAC		
	Open	5°		3°
	Close	80°		87°
IEC protection class		III (SELV)		
Protection level		IP 54		
Operating temperature		-30 – 55 °C		
Connecting cable	Actuator	1 m, 3 × 0.75 mm <sup>2</sup> , halogen-free		
	Limit switch	1 m, 6 × 0.75 mm <sup>2</sup> , halogen-free		
CE conformity according to		2014/30/EU, 2014/35/EU		

## 7.3.2 B230

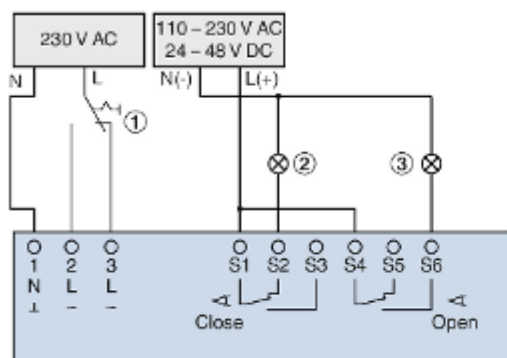


Fig. 27: Wiring example 230 V AC

- ① Switch for opening and closing, to be provided by others
- ② Indicator light for CLOSED position, to be provided by others
- ③ Indicator light for OPEN position, to be provided by others

### Technical data for OPEN/CLOSE actuators

Order code detail		B230		
Actuator		BEN230 TR	BEE230 TR	BE230 TR
Supply voltage		AC 198 – 264 V, 50/60 Hz		
Power consumption operation		4 W	3.5 W	8 W
Power consumption – when idle		0.4 W		0.5 W
Power consumption rating		7 VA	6 VA	15 VA
		4 A, I <sub>max.</sub> (5 ms)		7.9 A, I <sub>max.</sub> (5 ms)
Torque		15 Nm	25 Nm	40 Nm
Run time		< 30 s (90°)	< 60 s (90°)	< 60 s (90°)
Limit switch	Type of contact	2 changeover contacts		
	Switch rating	1 mA – 3 A (0.5 A inductive),		1 mA – 6 A (0.5 A inductive),
	Switching voltage	5 V DC – 250 V AC		
	Open	5°		3°
	Close	80°		87°
IEC protection class		II		
Protection level		IP 54		
Operating temperature		-30 – 55 °C		-30 – 50 °C
Connecting cable	Actuator	1 m, 3 × 0.75 mm <sup>2</sup> , halogen-free		
	Limit switch	1 m, 6 × 0.75 mm <sup>2</sup> , halogen-free		
CE conformity according to		2014/30/EU, 2014/35/EU		



7.3.3 B24-SR

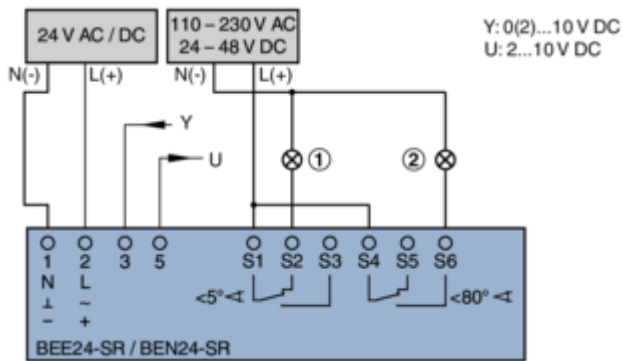


Fig. 28: Wiring example 24 V AC / DC, variable

- ① Indicator light for CLOSED position, to be provided by others
  - ② Indicator light for OPEN position, to be provided by others
- Y Operating range (target value)  
U Position feedback (actual value)

Attention:

- An input voltage of 0(2)...10 V DC at operating range Y (terminal 3) is essential for controlling the actuator!
  - 0(2) V DC = closed
  - 10 V DC = open
- Terminal 1 is used as a common earth contact for the operating range Y as well as the position feedback U.
- The current must be limited to max. 0.5 mA for measuring the position feedback (actual value)!
- In addition, observe the following instructions ↪ Chapter 7.2 'General instructions for wiring and connection to the MCE' on page 45

Technical data of modulating actuators

Order code detail		B24-SR	
Actuator		BEN24-SR TR	BEE24-SR TR
Supply voltage supply with safety transformer		AC 19.2 – 28.8 V, 50/60 Hz / DC 21.6 – 28.8 V, 50/60 Hz	
Power consumption operation		3 W	3 W
Power consumption – when idle		0.3 W	
Power consumption rating		6.5 VA	5.5 VA
		8.2 A, I <sub>max.</sub> (5 ms)	
Torque		15 Nm	25 Nm
Run time		< 30 s (90°)	< 60 s (90°)
Operating range Y		2 – 10 V DC	
Input resistance		100 kΩ	
Position feedback signal U		2 – 10 V DC, max. 0.5 mA	
Positional accuracy		± 5 %	
Limit switch	Type of contact	2 changeover contacts	
	Switch rating	1 mA – 3 A (0.5 A inductive), AC 250 V	
IEC protection class		III (SELV)	
Protection level		IP 54	

Order code detail		B24-SR	
Actuator		BEN24-SR TR	BEE24-SR TR
Operating temperature		-30 – 55 °C	
Connecting cable	Actuator	1 m, 4 × 0.75 mm <sup>2</sup> , halogen-free	
	Limit switch	1 m, 6 × 0.75 mm <sup>2</sup> , halogen-free	
CE conformity according to		2014/30/EU, 2014/35/EU	

## 7.4 Actuator with control module

In the smoke extract system, the smoke control damper can be controlled individually or in a coordinated system in accordance with the fire control matrix. A higher-level control system of the mechanical smoke extract system or pressurisation system controls and monitors the status of the dampers. Communication modules can be connected directly to the actuator inside the encasing and establish communication and power supply to the control system.

**7.4.1 TROXNETCOM B24A, B24AM, B24AS**

- One control unit (controller = master) communicates with the control modules (slaves), 31 modules per master
- Free BUS topology of the two-wire cable for data and energy
- Simple and intelligent wiring system

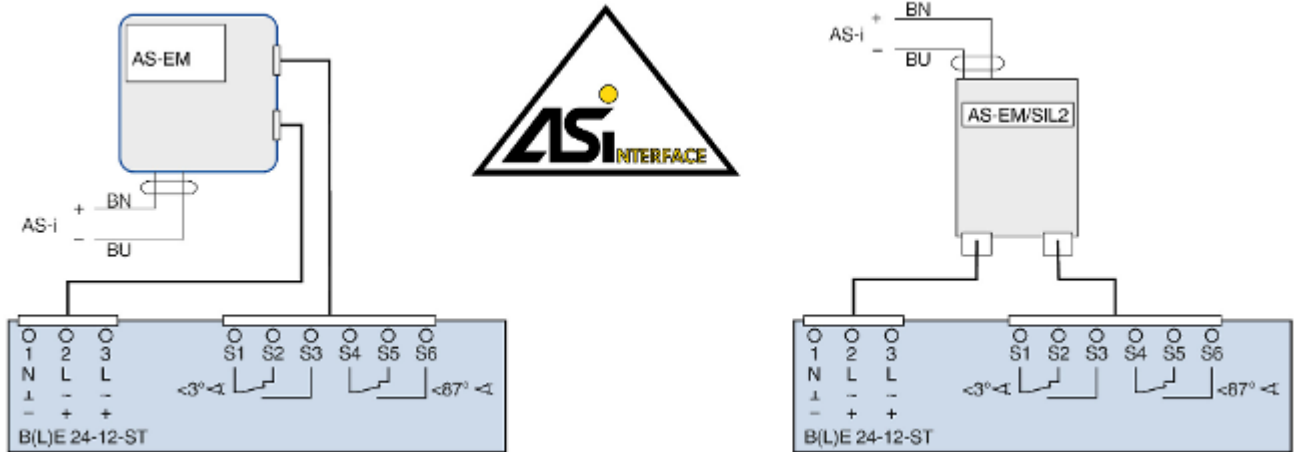


Fig. 29: Wiring example for attachments B24A and B24AS

BN Brown (+)  
 BU Blue (-)

The actuator and the AS-i control module are factory wired.

The supply voltage and signal line are connected via the AS-i bus (+/-).

The connecting cables of the AS-EM/SIL module are fitted with wire end ferrules.

Technical data of the actuator, ↗ 7.3.2 'B230' on page 48 , ↗ Chapter 7.3.1 'B24' on page 47 .

**Technical data control module**

Order code detail	B24A	B24AM	B24AS
Control module	AS-EM/EK	AS-EM/M	AS-EM/SIL2
Supply voltage	26.5 – 31.6 V DC		
Current consumption	450 mA	450 mA	< 400 mA from AS-i
Current carrying capacity per output	400 mA	400 mA	340 mA
Current carrying capacity per module	400 mA	400 mA	340 mA
Interfaces	4 inputs/3 outputs	4 inputs/3 outputs	2 outputs transistor (typically 24 V DC from AS-i, voltage range 18 – 30 V)
Operating temperature	-5 – 75 °C	-5 – 75 °C	-20 – 70 °C
Storage temperature	-5 – 75 °C	-5 – 75 °C	-20 – 75 °C
Protection level, IEC protection class	IP 42	IP 42	IP 54
AS-i profile	S7.A.E	S7.A.E	S-7.B.E (Safety at Work) and S7.A.E (motor module)

## 7.4.2 B24BKNE

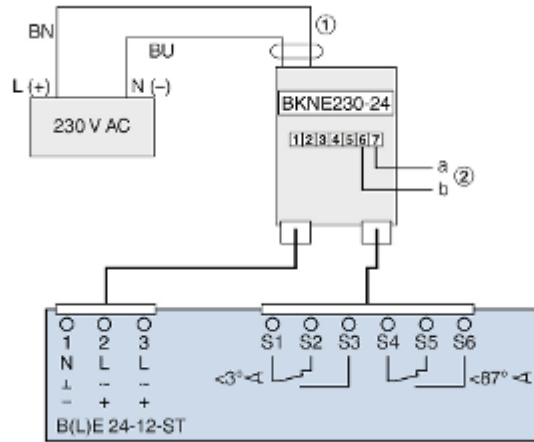


Fig. 30: Wiring example for attachment B24BKNE

BN Brown L (+)  
 BU Blue N (-)

① Supply voltage  
 ② 2-wire cable (signal)

The actuator and the control module are factory wired.

Connect the supply voltage to the connecting cable (approx. 1 m, with wire end ferrules). 2-wire cable for signals (terminals 6 and 7).

Technical data of the actuator, ↗ 7.3.2 'B230' on page 48 , ↗ Chapter 7.3.1 'B24' on page 47 .

### Technical data control module

Order code detail	B24BKNE
<b>Control module</b>	<b>BKNE230-24</b>
Nominal voltage	AC 230 V 50/60 Hz
Functional range	AC 198 – 264 V
Rating	19 VA (including actuator)
Power consumption	10 W (including actuator)
Supply voltage connecting cable	Cable, 1 m (halogen-free, without plug)
2-wire cable	Screw terminals for wire $2 \times 1.5 \text{ mm}^2$
Recommended cable	JE-H (St) Bd FE180/E30-E90
IEC protection class	II (protective insulation)
Ambient temperature (normal operation)	-30 – +50 C
Storage temperature	-40 – +80 C

7.4.3 B24D and B230D

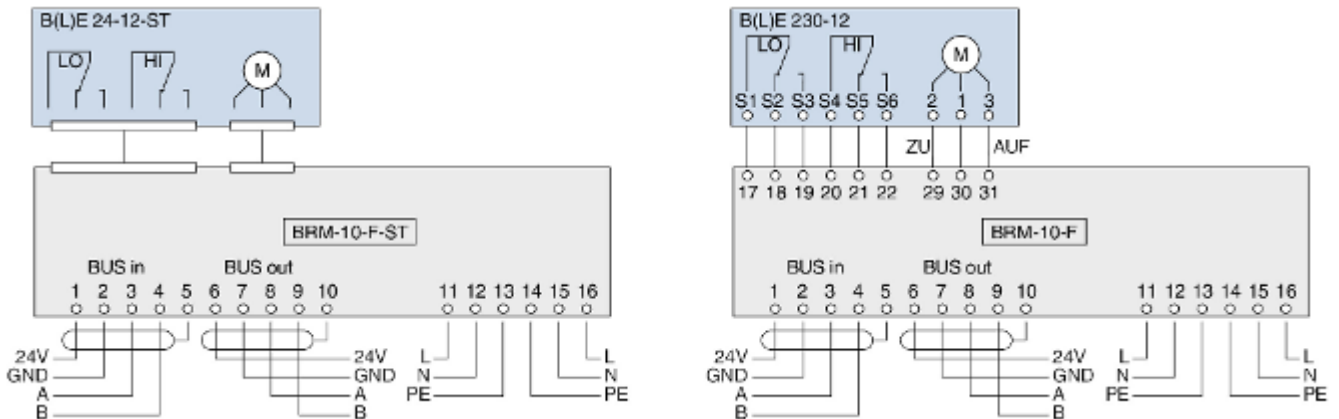


Fig. 31: Wiring example for attachments B24D and B230D

Upon commissioning, check whether the damper blades move correctly from OPEN to CLOSED.

The mode switch allows you to choose one of the following operating modes for the damper:

- Automatic (damper is controlled via the bus; status LEDs are not active)
- Maintenance (damper is controlled via the bus; status LEDs are not active)
- Manual open contact (bus commands are ignored)
- Manual close contact (bus commands are ignored)

The actuator and the control module are factory wired.

Technical data of the actuator, ↗ 7.3.2 'B230' on page 48 , ↗ Chapter 7.3.1 'B24' on page 47 .

Technical data

Order code detail		B24D	B230D
Control module		BRM-10-F-ST	BRM-10-F
Electrical data	Supply voltage	18 – 32 V DC (typically 24 V)	
	Current consumption	5 mA typically, 26 mA max. (for 100 ms when relays is activated)	
	Protection level	IP20 (EN 60529)	
	IEC protection class	II	
Construction	Digital inputs	2 for feedback from limit switches (volt-free)	
	Digital outputs	1 for signalling to the damper	
Outputs	Actuator	24 V DC	24 / 230 V AC
	Max. continuous current	AC 5 A	DC 5 A
	Max. switch-on current (< 15 ms)	AC 8 A	DC 8 A
	Switch ratings	1250 VA / 150 W	
Terminals for damper input	Maximum terminal cross-section	Single-wire: 0.08 – 2.5 mm <sup>2</sup>	
		Fine wire (without ferrule): 0.08 – 2.5 mm <sup>2</sup>	
Fine wire (ferrule with collar): 0.25 – 1.5 mm <sup>2</sup>			
		Fine wire (ferrule without collar): 0.25 – 2.5 mm <sup>2</sup>	
	Maximum current, terminals	10A	

Actuator with control module > B24D and B230D

Order code detail		B24D	B230D
Control module		BRM-10-F-ST	BRM-10-F
	Maximum pre-fuse	LSS 10A Charakteristic B	
Terminals for BusRing, feedback, damper output	Terminal cross-sections	Single-wire: 0.2 – 1.5 mm <sup>2</sup> Fine wire (without ferrule): 0.2 – 1.5 mm <sup>2</sup> Fine wire (ferrule with collar): 0.25 – 0.75 mm <sup>2</sup> Fine wire (ferrule without collar): 0.25 – 1.5 mm <sup>2</sup>	
Ambient conditions	Ambient temperature	0 – 45 °C	
	Ambient humidity	0 – 90 %	

## 8 Commissioning/functional test

### 8.1 Commissioning

Before commissioning, each smoke control damper must be inspected to determine and assess its actual condition, ☞ *'Inspection, maintenance and repair measures'* on page 57 .

The movement of the blades may over time lead to grooves in the side seals (where the blades meet the casing). This does not impair the function of the damper. Once installed, the damper blades adapt themselves to the seals and compensate smallest deviations.

Important: The casing must be installed perpendicular to the floor and with the lower edge horizontal (not tilted to any side).

### 8.2 Functional test

#### General

Smoke control dampers must be checked regularly. A functional test involves closing the smoke control damper and opening it again. This is typically done with an input signal from a central system, e.g. from the central fire alarm system.

## 9 Maintenance

### General safety notes

#### DANGER!

Danger of electric shock! Do not touch any live components! Electrical equipment carries a dangerous electrical voltage.

- Only skilled qualified electricians are allowed to work on the electrical system.
- Switch off the power supply before working on any electrical equipment.

#### CAUTION!

Danger due to inadvertently actuating the smoke control damper. Inadvertent actuation of the damper blade can lead to injuries.

Make sure that the damper blade cannot be operated inadvertently.

Regular care and maintenance ensure operational readiness, functional reliability, and long service life of the smoke control dampers.

The system owner is responsible for the maintenance of the smoke control damper. The system owner is responsible for creating a maintenance plan, for defining the maintenance goals, and for the functional reliability of the equipment.

### Functional test

The functional reliability of the smoke control damper must be tested at least every six months; this has to be arranged by the owner or operator of the system. If two consecutive tests, one 6 months after the other, are successful, the next test can be conducted one year later.

The functional test must be carried out in compliance with the basic maintenance principles of the following standards:


- EN 12101-8
- EN 13306
- EN 15423
- Depending on where dampers are installed, country-specific regulations may apply.

### Maintenance

The smoke control damper and the actuator are maintenance-free with regard to wear but smoke control dampers must still be included in the regular cleaning of the smoke extract system.


### Inspection

Smoke control dampers must be inspected before commissioning. After commissioning, the function has to be tested in regular intervals. Local requirements and building regulations must be complied with.

The inspection measures to be taken are listed in  'Inspection, maintenance and repair measures' on page 57.

The test of each smoke control damper must be documented and evaluated. If the requirements are not fully met, suitable remedial action must be taken.

### Repair

For safety reasons, repair work must only be carried out by expert qualified personnel or the manufacturer. Only original replacement parts are to be used. A functional test is required after any repair work  'Inspection, maintenance and repair measures' on page 57.

Any repair must be documented.

### Cleaning

All surfaces of TROX components and systems, with the exception of electronic parts, may be wiped with a dry or damp cloth. All surfaces may also be cleaned with an industrial vacuum cleaner. To avoid any scratches, a soft brush should be used on the suction inlet. Use a soft brush to clean the seals. Do not use cleaning agents that contain chlorine. The use of cleaning utensils such as scouring sponges or scouring milk may damage the surfaces and is not permitted for cleaning.



## Inspection, maintenance and repair measures

Interval	Maintenance work	Personnel
A	Accessibility of the smoke control damper <ul style="list-style-type: none"> <li>■ Internal and external accessibility               <ul style="list-style-type: none"> <li>– Provide access</li> </ul> </li> </ul>	Trained personnel
	Installation of the smoke control damper <ul style="list-style-type: none"> <li>■ Installation according to the operating manual ↗ 5 'Installation' on page 18               <ul style="list-style-type: none"> <li>– Install the smoke control damper correctly</li> </ul> </li> </ul>	Trained personnel
	Connection of smoke extract ducts/cover grille/flexible connector <ul style="list-style-type: none"> <li>↗ 6 'Smoke extract duct and cover grille' on page 43               <ul style="list-style-type: none"> <li>■ Connection according to this manual                   <ul style="list-style-type: none"> <li>– Establish correct connection</li> </ul> </li> </ul> </li> </ul>	Trained personnel
	Supply voltage for the actuator <ul style="list-style-type: none"> <li>■ Power supply according to the actuator rating plate               <ul style="list-style-type: none"> <li>– Supply correct voltage</li> </ul> </li> </ul>	Skilled qualified electrician
A / B	Check of the smoke control damper for damage <ul style="list-style-type: none"> <li>■ Smoke control damper, damper blades and seal must be intact               <ul style="list-style-type: none"> <li>– Repair or replace the smoke control damper</li> </ul> </li> </ul>	Trained personnel
	Functional test of the smoke control damper ↗ 8.2 'Functional test' on page 55 <ul style="list-style-type: none"> <li>■ Drive function OK (damper blades close and open)               <ul style="list-style-type: none"> <li>– Determine and eliminate the cause of the fault</li> <li>– Replace actuator</li> <li>– Repair or replace the smoke control damper</li> </ul> </li> </ul>	Trained personnel
C	Cleaning the smoke control damper <ul style="list-style-type: none"> <li>■ No contamination in the interior or on the exterior of the smoke control damper               <ul style="list-style-type: none"> <li>– Remove contamination</li> </ul> </li> </ul>	Trained personnel

**Interval****A = Commissioning****B = Regularly**

The functional reliability of smoke control dampers must be tested at least every six months. If two consecutive tests are successful, the next test can be conducted one year later.

**C = As required, depending on the degree of contamination****Maintenance work**

Item to be checked

- Required condition
  - Remedial action if necessary

## 10 Decommissioning, removal and disposal

### 10.1 Final decommissioning

- Switch off the ventilation system.
- Switch off the supply voltage.

### 10.2 Removal

#### **DANGER!**

Danger of electric shock! Do not touch any live components! Electrical equipment carries a dangerous electrical voltage.

- Only skilled qualified electricians are allowed to work on the electrical system.
- Switch off the power supply before working on any electrical equipment.

1. ▶ Disconnect the connecting cable.
2. ▶ Remove the smoke extract ducts.
3. ▶ Close the smoke control damper.
4. ▶ Remove the smoke control damper.

### 10.3 Disposal

#### **ENVIRONMENT!**

**Risk of harm to the environment due to incorrect disposal!**



Incorrect disposal can harm the environment.

Have electronic waste and electronic components disposed of by an approved specialist disposal company.

**Note:** The smoke control damper must be dismantled into its individual components for disposal.



11 Flange dimensional drawing

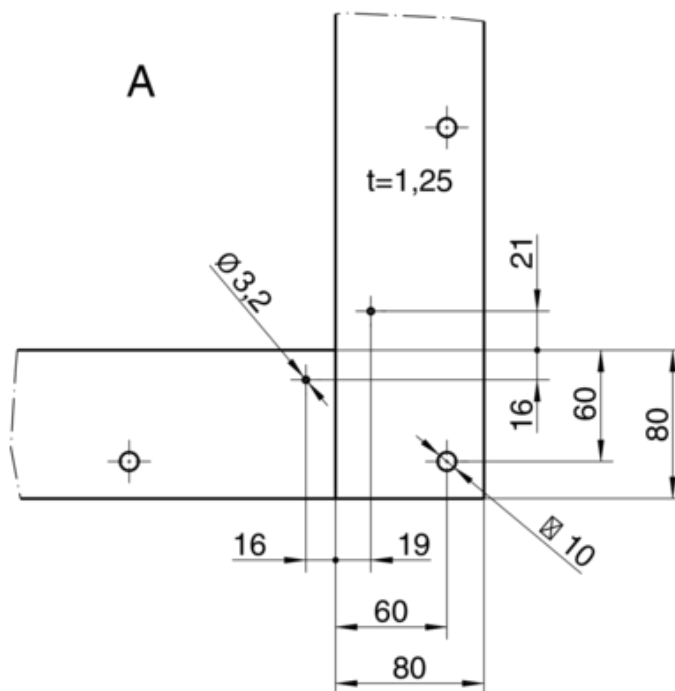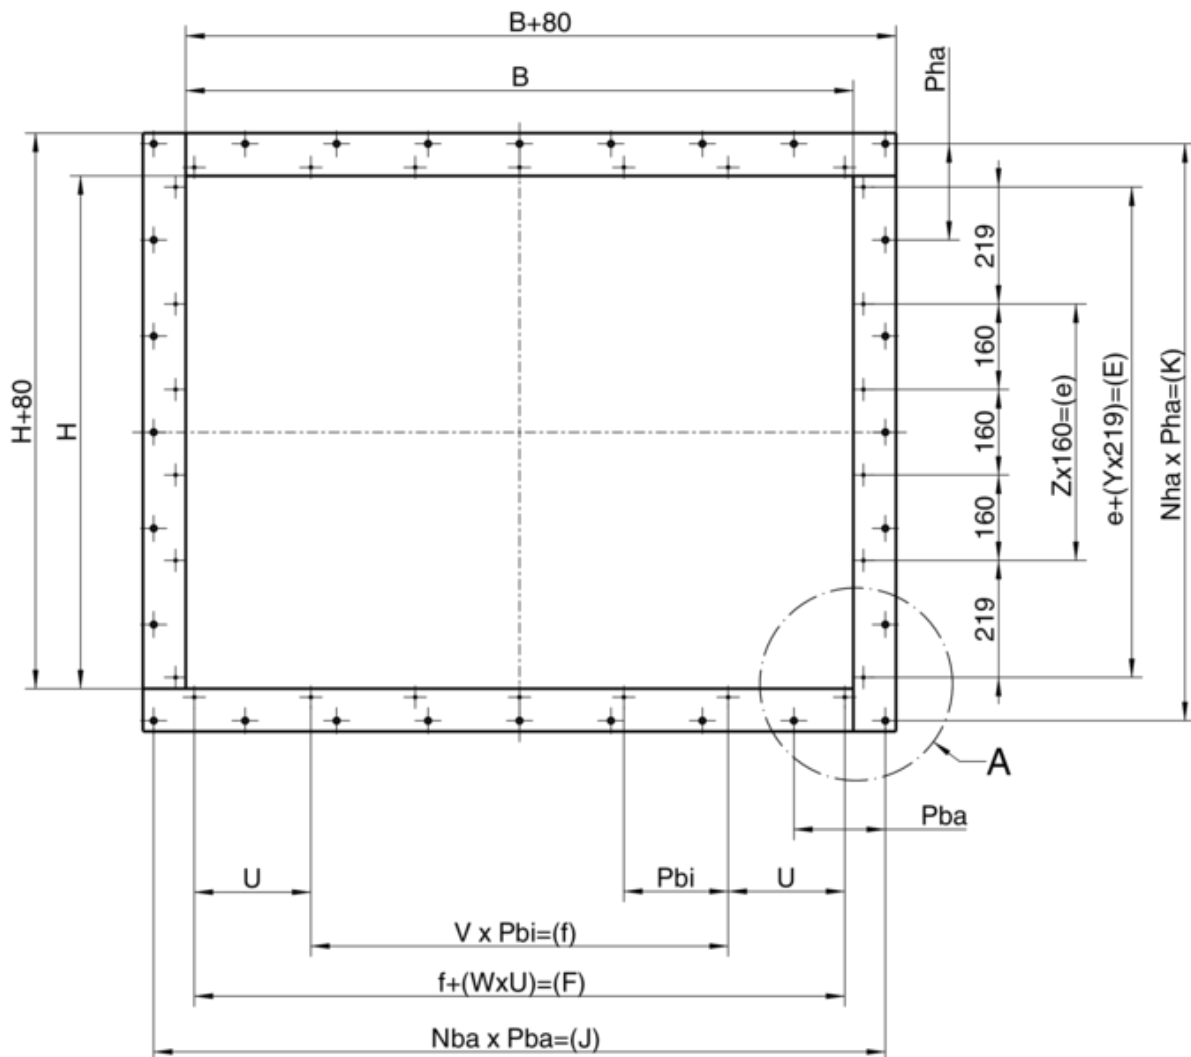

B	Nba	Nbi	V	W
100-179	2	0	0	0
180-277	3	1	0	1
278-477	4	2	0	2
478-677	5	3	1	2
678-877	6	4	2	2
878-1077	7	5	3	2
1078-1250	8	6	4	2

H	Nha	Z	Y	e	E
100-165	2	0	0	0	0
320	3	0	$\frac{278}{219}$	0	278*
480	3	0	2	0	438
640	4	1	2	160	598
800	5	2	2	320	758
960	6	3	2	480	918
1120	7	4	2	640	1078
1280	8	5	2	800	1238
1440	9	6	2	960	1398
1600	10	7	2	1120	1558
1760	11	8	2	1280	1718
1920	12	9	2	1440	1878
2080	13	10	2	1600	2038
2240	14	11	2	1760	2198
2400	15	12	2	1920	2358
2560	16	13	2	2080	2518

\* For H-dimension 320, a Ø 3.2 hole is added in the middle of E-dimension (278).

### Formulas

$$Pha = (H + 120) / Nha$$

$$Pba = (B + 120) / Nba$$

$$Pbi = (B - 78) / Nbi$$

$$F = B - 32$$

$$f = F - U$$

$$U = (F - f) / 2$$

$$E = H - 42$$

$$e = E - (Y \times 219)$$

### Nomenclature

#### EK-JS

B - Widths nominal dimension

H - Heights nominal dimension

#### Flange, holes outside (wall mounting)

J - Sum of the distances of the outer holes on width side

Pba - Spacing of the outer holes on width side

Nba - Pitch of the outer holes on width side

K - Sum of the distances of the outer holes on height side

Pha - Spacing of the outer holes on height side

Nha - Pitch of the outer holes on height side

#### Flange, holes inside (flange - damper connection)

F - Sum of the distances of the outer holes on width side

Pbi - Spacing of the inner holes on width side

Nbi - Pitch of the inner holes on width side

f - Sum of the distances of the inner internal holes on width side

U - Spacing of the inner external holes on width side

V - Number of inner internal holes on width side

W - Number of the inner external holes on width side

E - Sum of the distances of the inner holes on height side

e - Sum of the distances of the inner internal holes on height side

Z - Number of inner internal holes on height side

Y - Number of the inner external holes on height side

P - Spacing

N - Pitch

b - Width side

h - Height side

a - outdoors

i - inside

## 12 Index

### 1, 2, 3 ...

230 V actuator

    OPEN/CLOSE..... 48

24 V actuators

    Modulating..... 49

    OPEN/CLOSE..... 47

### A

Actuator..... 16, 45

AS-i..... 45

### B

Blades..... 16

### C

Canvas spigots..... 43

Commissioning..... 55

Copyright..... 3

Correct use..... 6

Cover grilles..... 44

### D

Damper blade..... 16

Damper installation position..... 19

Decommissioning..... 58

Defects liability..... 3

Dimensions..... 13, 14

Disposal..... 58

Duct clips..... 43

### E

Enclosure..... 16

Expansion joints ..... 43

### F

Flexible spigots..... 43

Functional test..... 55

### H

Horizontal..... 19

### I

Inspection..... 56, 57

Installation

    at the end of a horizontal smoke extract duct..... 24

    at the end of a vertical smoke extract duct..... 38

    in a vertical smoke extract duct..... 36

    in horizontaler Entrauchungsleitung..... 22

    on a horizontal smoke extract duct..... 20, 26

    on a vertical smoke extract duct..... 34

    on a vertical solid smoke extract duct..... 40

    on solid shaft walls..... 40

    under a horizontal smoke extract duct..... 30

Installation orientation..... 19

Installation position..... 19

Installation situations..... 18

### L

Limitation of liability..... 3

Linkage..... 16

### M

Maintenance..... 56

Management and control equipment (MCE)..... 45

### P

Packaging..... 15

### R

Rating plate..... 9, 16

Removal..... 58

Repair..... 56, 57

### S

Safety instructions for electrical installation..... 45

Seal..... 16

Service..... 3

Sheet steel smoke extract duct

    Connection on..... 43

Spare & Claim Department..... 3

Staff..... 7

Storage ..... 15

Supply voltage..... 45

Suspension system..... 42

Symbols..... 4

### T

Technical data..... 8

Threaded rods..... 42

Transport..... 15

Transport damage..... 15

### V

Vertical..... 19

### W

Warranty claims..... 3

Weights..... 13, 14

Wiring..... 45

# TROX<sup>®</sup> TECHNİK

The art of handling air

**TROX GmbH**  
Heinrich-Trox-Platz  
47504 Neukirchen-Vluyn  
Germany

Phone: +49 (0) 2845 202-0  
+49 (0) 2845 202-265  
E-mail: [trox-de@troxgroup.com](mailto:trox-de@troxgroup.com)  
<http://www.troxtechnik.com>

Valid from 01/2022